

# FZ-CT SERIES

FZ-1200CT/FZ-700CT/FZ-500CT

# FX-CT SERIES

FX-1200CT/FX-700CT/FX-500CT

## Carat Balance

## INSTRUCTION MANUAL



1WMPD4002564

© 2012 A&D Company, Limited. All rights reserved.

No part of this publication may be reproduced, transmitted, transcribed, or translated into any language in any form by any means without the written permission of A&D Company, Limited.

The contents of this manual and the specifications of the instrument covered by this manual are subject to change for improvement without notice.

Windows, Word and Excel are the registered trademarks of the Microsoft Corporation.

# CONTENTS

## BASIC OPERATION

1. INTRODUCTION .....	3
1-1 About This Manual .....	3
1-2 Features.....	3
1-3 Compliance.....	4
2. UNPACKING THE BALANCE.....	5
2-1 Unpacking.....	5
2-2 Installing the Balance.....	6
3. PRECAUTIONS.....	7
3-1 Before Use.....	7
3-2 During Use.....	8
3-3 After Use .....	9
3-4 Power Supply.....	9
4. DISPLAY SYMBOLS AND KEY OPERATION .....	10
5. WEIGHING .....	11
5-1 Basic Operation .....	11

## ADAPTING TO THE ENVIRONMENT

6. RESPONSE ADJUSTMENT.....	12
7. CALIBRATION.....	13
7-1 Calibration Mode.....	13
7-2 Calibration Using the Internal Mass (One-Touch Calibration, only for the FZ-CT series).....	14
7-3 Calibration Test Using the Internal Mass (Only for the FZ-CT series) .....	15
7-4 Calibration Using an External Weight .....	16
7-5 Calibration Test Using an External Weight.....	18
7-6 Correcting the Internal Mass Value: 1 (Only for the FZ-CT series) .....	20
7-7 Correcting the Internal Mass Value: 2 (Only for the FZ-CT series) .....	21
8. FUNCTION SWITCH AND INITIALIZATION.....	22
8-1 Permit or Inhibit.....	22
8-2 Initializing the Balance .....	23

## FUNCTIONS

9. FUNCTION TABLE .....	24
9-1 Structure and Sequence of the Function Table .....	24
9-2 Display and Keys .....	24
9-3 Details of the Function Table.....	25
9-4 Description of the Class “Environment, Display” .....	28
9-5 Description of the Item “Data Output Mode” .....	29

9-6 Description of the Item “Data Format” .....	31
9-7 Data Format Examples .....	33
9-8 Units .....	35
9-9 Storing Units .....	37
9-10 Counting Mode (PCS).....	38
9-11 Percent Mode (%) .....	40
9-12 Description of the Item “Application Function” .....	41
9-13 Statistical Calculation Mode .....	42
9-14 Comparator Function .....	46
9-15 Clock and Calendar Function (Only for the FZ-CT series) .....	47
10. ID NUMBER AND GLP REPORT .....	49
10-1 Setting the ID Number .....	49
10-2 GLP Report.....	49
11. UNDERHOOK .....	53
12. PROGRAMMABLE-UNIT .....	54

## **RS-232C SERIAL INTERFACE**

13. RS-232C SERIAL INTERFACE .....	55
14. CONNECTION TO PERIPHERAL EQUIPMENT .....	56
14-1 Connection to the AD-8121B Printer.....	56
14-2 Connection to a Computer.....	57
14-3 Using Windows Communication Tools (WinCT).....	57
15. COMMANDS .....	59
15-1 Command List .....	59
15-2 Acknowledge Code and Error Codes.....	60
15-3 Settings Related to RS-232C.....	61

## **MAINTENANCE**

16. MAINTENANCE .....	62
17. TROUBLESHOOTING .....	63
17-1 Checking the Balance Performance and Environment .....	63
17-2 Error Codes .....	64
17-3 Asking For Repair .....	66
18. OPTIONS .....	67
19. SPECIFICATIONS.....	70
20. EXTERNAL DIMENSIONS .....	72
21. TERMS/INDEX.....	73

# 1. INTRODUCTION

This manual describes how the FZ-CT and FX-CT series balances work and how to get the most out of them in terms of performance.

Read this manual thoroughly before using the balance and keep it at hand for future reference.

## 1-1 About This Manual

---

This manual consists of the following five parts:

- Basic operation ..... Describes precautions on handling the balance, balance construction and basic balance operation.
- Adapting to the environment ..... Describes response adjustment and calibration.
- Functions ..... Describes various functions of the balance.
- RS-232C serial interface ..... Describes the interface which transmits data and controls the balance.
- Maintenance ..... Describes maintenance, error codes, troubleshooting, specifications and options.

## 1-2 Features

---

- Compact general-purpose balance, can be installed almost anywhere.
- Large breeze break, provided as a standard accessory for more accurate weighing.
- The breeze break can be removed with one touch, so cleaning is simple.
- Casing construction, strong protection against dust and moisture.
- Carat pans for weighing jewelry, provided as standard accessories,
- Multiple weighing units with most of the common units used around the world.  
The default settings of the unit of weight are the metric carat (ct) and grams (g). The unit can be switched by pressing the **MODE** key.
- Standard RS-232C serial interface to communicate with a computer and to output the Good Laboratory Practice (GLP) / Good Manufacturing Practice (GMP) compliant report.
- Statistical calculation mode to statistically calculate the weight data, and display or output the sum, maximum, minimum, range (maximum-minimum), average, standard deviation, coefficient of variation, relative error of maximum value and relative error of minimum value.
- Comparator Indicators, displaying the comparison results.
- Underhook, provided for suspended weighing.
- Hold Function, provided for weighing a moving object such as an animal.
- As options, the USB interface (FXi-02), the Ethernet interface (FXi-08) and the built-in battery unit (FXi-09) are available.  
Connecting the USB interface, by cable to a Windows computer, allows transmission of the weight data to Excel or Word. The Ethernet interface allows connection of the balance to a personal computer through a LAN. The battery unit allows use of the balance where a power source is not available.
- Optional AD-8920A remote display, connected to the balance using the RS-232C interface to display the weight data away from the balance or at a desirable viewing angle. The power to the AD-8920A is supplied from the balance. So, cable hookups are simplified.

# 1-3 Compliance

## Compliance with FCC Rules

Please note that this device generates, uses and can radiate radio frequency energy. This device has been tested and has been found to comply with the limits of a Class A computing device pursuant to Subpart J of Part 15 of FCC rules. These rules are designed to provide reasonable protection against interference when this device is operated in a commercial environment. If this unit is operated in a residential area, it may cause some interference and under these circumstances the user would be required to take, at his own expense, whatever measures are necessary to eliminate the interference.  
(FCC = Federal Communications Commission in the U.S.A.)

## Compliance with EMC Directives

**CE** This device features radio interference suppression and safety regulation in compliance with the following Council Directives

Council directive 2004/108/EC EN61326 EMC directive

Council directive 2006/95/EC EN60950 Safety of Information Technology Equipment

- The CE mark is an official mandatory European marking.  
Please note that any electronic product must comply with local laws and regulations when sold or used anywhere outside Europe.



**A&D**  
A&D INSTRUMENTS

A&D Instruments Ltd  
24 Blacklands Way  
Abingdon Business Park  
Abingdon, Oxfordshire  
OX14 1DY United Kingdom  
Tel: +44(0)1235 550420  
Fax: +44(0)1235 550485  
Email: info@aand-eu.net  
Internet: http://www.aand-eu.net  
Vat No: GB 556 1273 15

---

**CE**

A & D Instruments Ltd. hereby declare that the following Weighing product conforms to the requirements of the council directives on  
**Electromagnetic Compatibility (EMC) 2004/108/EC and Low Voltage Equipment (LVD) 2006/95/EC amended by 93/68/EEC**  
provided that they bear the CE mark of conformity.

**Model/Series... FZ-CT/FX-CT Series**

Standards applicable:

EN61326-1:2006	Electrical equipment for measurement, control and laboratory use -EMC requirements Part 1: General requirements
EN60950-1:2006	Information technology equipment. Safety. General requirements

CE Mark first applied 31 January 2012  
Signed for A&D Instruments in Oxford England 23 October 2012

  
G. Allen  
Managing Director

*Clearly a Better Value*




Registered in England No: 2609110- Registered Office: 24/26 Blacklands Way Abingdon, Oxon OX14 1DY

## 2. UNPACKING THE BALANCE

### 2-1 Unpacking

- The balance is a precision instrument. Unpack the balance carefully. Keep the packing material to be used for transporting the balance in the future.
- See the illustration to confirm that everything is contained.

For accurate weighing, install the breeze break before use.

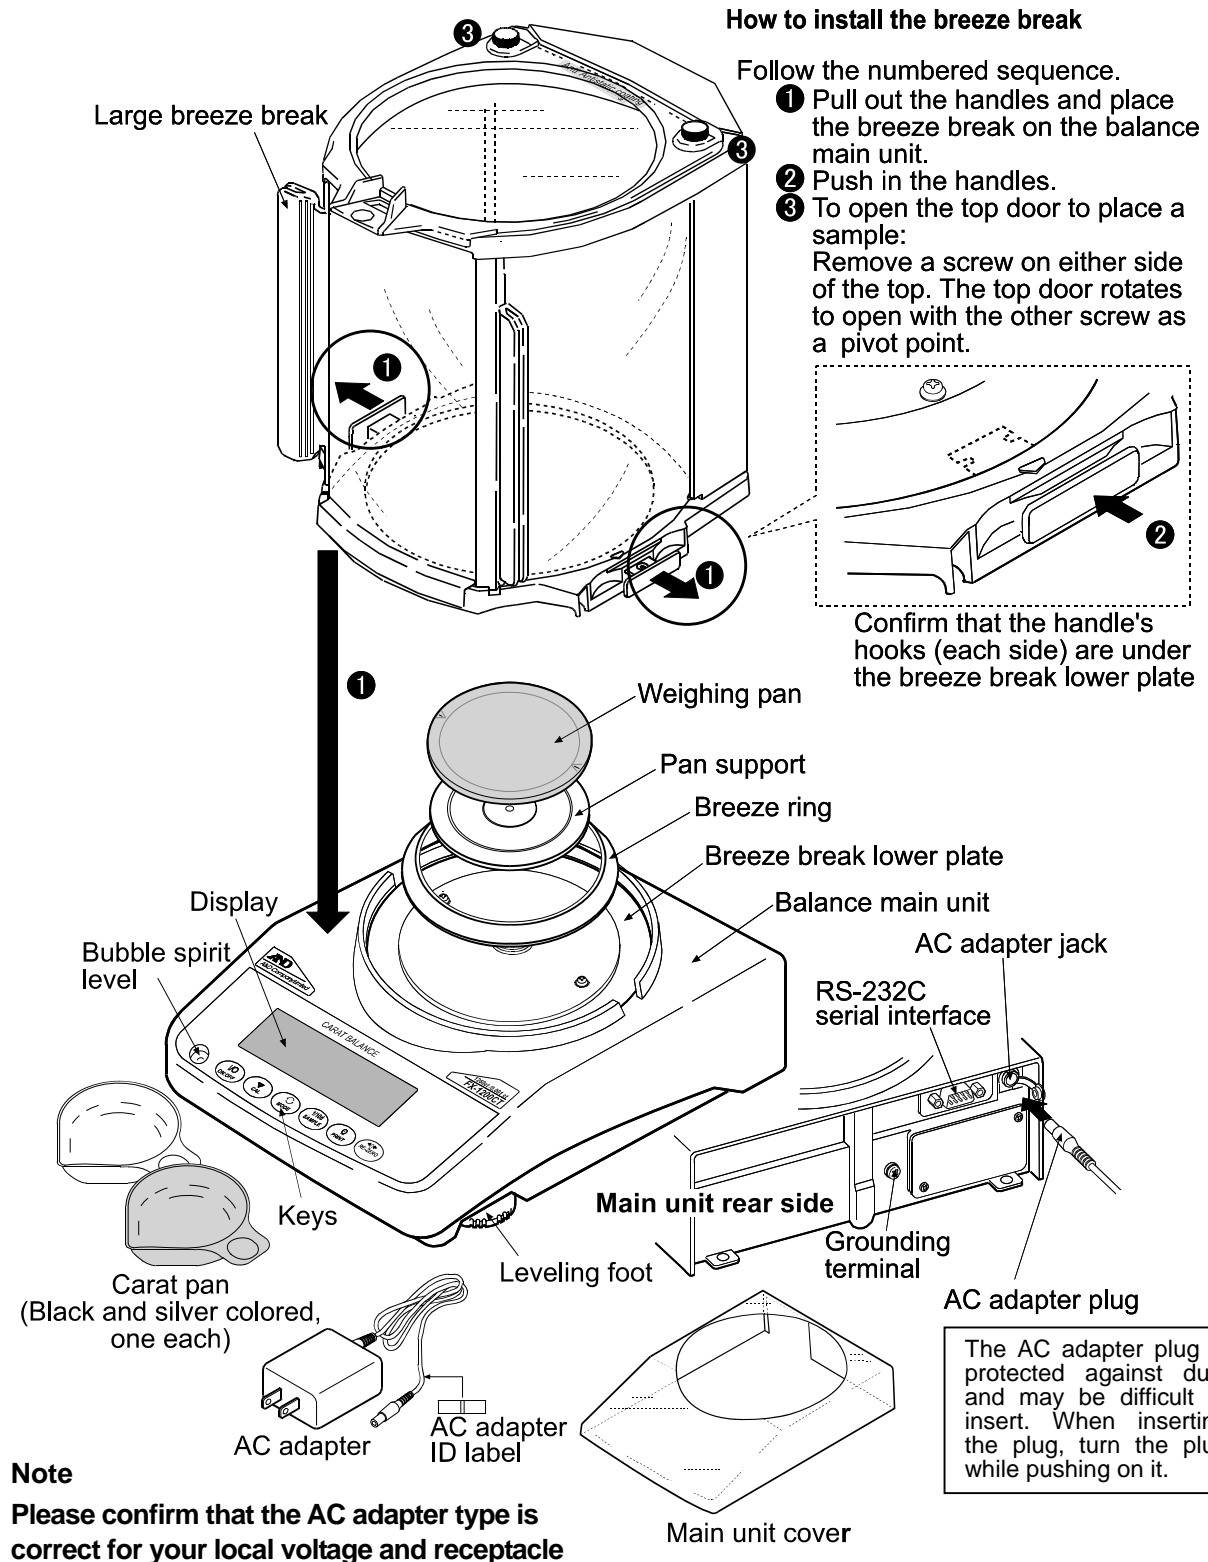

## 2-2 Installing the Balance

---

Install the balance as follows:

1. Place the balance on a solid weighing table. Refer to “3. PRECAUTIONS” for installing the balance.
2. Assemble the breeze ring, pan support, weighing pan and large breeze break on the balance as shown in the illustration on page 5.
3. Adjust the leveling feet to level the balance. Confirm it using the bubble spirit level.
4. Confirm that the AC adapter type is correct for the local voltage and power receptacle type.
5. Connect the AC adapter to the balance. Warm up the balance for at least one hour with nothing on the weighing pan.

### **Note**

**The AC adapter plug is protected against dust and may be difficult to insert. When inserting the plug, turn the plug while pushing on it.**








# 3. PRECAUTIONS

To get the optimum performance from the balance and acquire accurate weight data, note the following:

## 3-1 Before Use

- Install the balance in an environment where the temperature and humidity are not excessive. The best operating temperature is about 20°C / 68°F at about 50% relative humidity.
- Install the balance where it is not exposed to direct sunlight and it is not affected by heaters or air conditioners.
- Install the balance where it is free of dust.
- Install the balance away from equipment which produces magnetic fields.
- Install the balance in a stable place avoiding vibration and shock. Corners of rooms on the first floor are best, as they are less prone to vibration.
- The weighing table should be solid and free from vibration, drafts and as level as possible.
- Level the balance by adjusting the leveling feet and confirm it using the bubble spirit level.

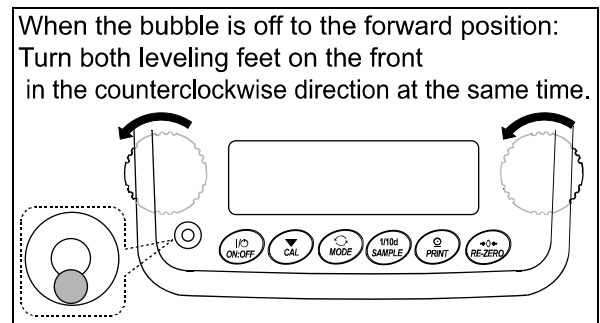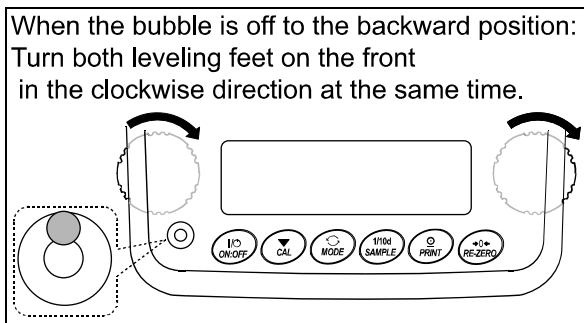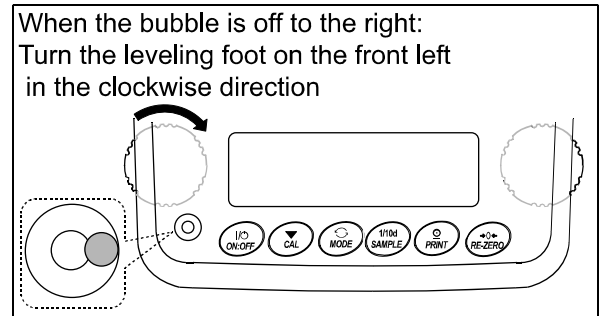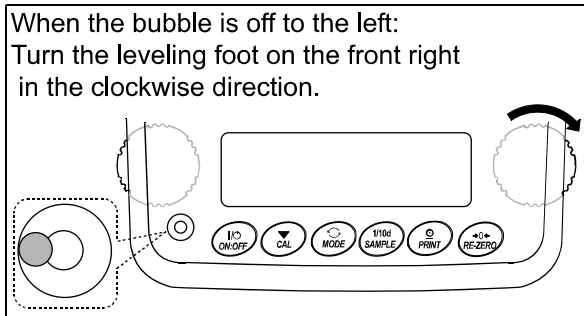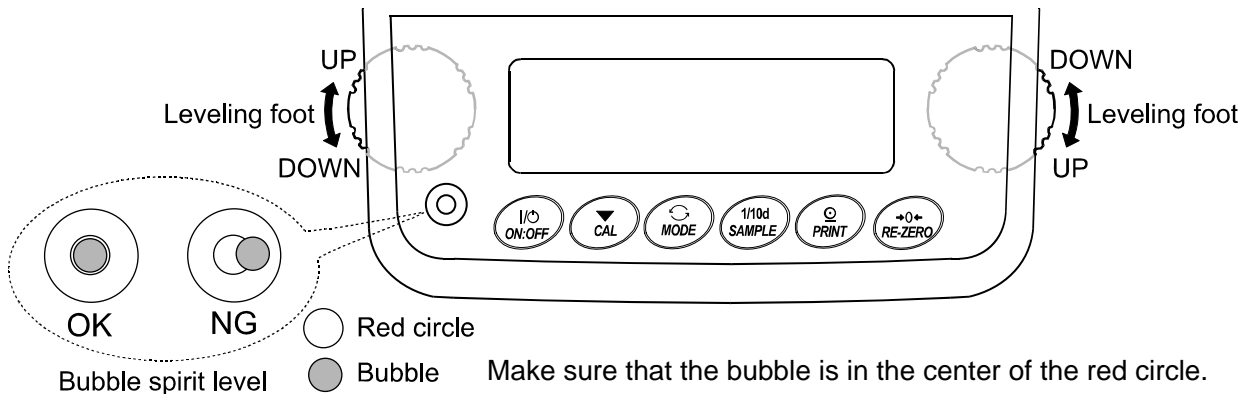



- Ensure a stable power source when using the AC adapter.
- Plug in the AC adapter and warm up the balance for at least one hour.
- Calibrate the balance before use or after having moved it to another location.

**Caution: Do not install the balance where flammable or corrosive gas is present.**

## 3-2 During Use

---

- Discharge static electricity from the material to be weighed (hereinafter referred to as the sample). When a sample could have a static charge, the weight data is influenced. Ground the balance and try the following:
  - Eliminate static electricity using the optional AD-1683 DC static eliminator.
  - Try to keep the ambient humidity above 45%RH.
  - Use a metal shield case for a charged sample.
  - Wipe charged plastic samples with a moistened cloth.
- This balance uses a strong magnet as part of the balance assembly, so please use caution when weighing magnetic materials such as iron. If there is a problem, use the underhook on the bottom of the balance to suspend the material away from the influence of the magnet.
- Eliminate the temperature difference between a sample and the environment. When a sample is warmer (cooler) than the ambient temperature, the sample will be lighter (heavier) than the true weight. This error is due to a rising (falling) draft around the sample.
- Make each weighing gently and quickly to avoid errors caused by the evaporation of moisture from the sample or the absorption of moisture by the sample. Use a pair of long tweezers to place a sample on the pan to avoid placing a hand inside the breeze break.
- Do not drop things upon the weighing pan, or place a sample on the pan that is beyond the balance weighing capacity. Place a sample in the center of the weighing pan.
- Do not use a sharp instrument such as a pencil to press the keys. Use your finger only.
- Press the **RE-ZERO** key before each weighing to eliminate possible errors.
- Calibrate the balance periodically so as to eliminate possible errors.
- Take into consideration the affect of air buoyancy on a sample when more accuracy is required.
- Keep the balance interior free of dust and foreign materials.
- An antistatic treatment has been applied to the components of the breeze break that is provided as standard, but they may be charged with static electricity when they are unpacked or when the humidity is low. Under such conditions, use the optional AD-1683 DC static eliminator or apply an antistatic spray to eliminate static electricity,

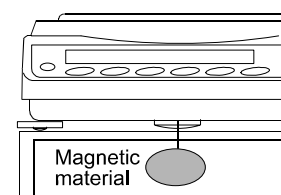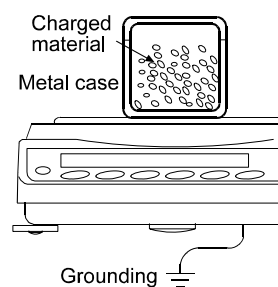

### 3-3 After Use

---

- Avoid mechanical shock to the balance.
- Do not disassemble the balance. Contact the local A&D dealer if the balance needs service or repair.
- Avoid dust and water so that the balance weighs correctly. Protect the internal parts from liquid spills and excessive dust.
- Do not use organic solvents or chemical cloth to clean the balance.

Clean the balance as described below:

Balance main unit Weighing pan	Use a soft, lint free cloth that is moistened with a mild detergent to clean. The edge of the weighing pan is sharp. Use caution when cleaning the pan.
Breeze break (standard accessory)	An antistatic treatment has been applied to the breeze break components. Use a soft, dry, lint free cloth to clean. Cleaning with a cloth that is moistened with water or a mild detergent repetitively, or washing with water, may degrade the antistatic effect.

### 3-4 Power Supply

---


- When the AC adapter is connected, the balance is in the standby mode if the standby indicator is on (refer to “4. DISPLAY SYMBOLS AND KEY OPERATION”). This is a normal state and does not harm the balance. For accurate weighing, warm up the balance for at least one hour before use.

# 4. DISPLAY SYMBOLS AND KEY OPERATION

## Key operation


Key operation affects how the balance functions. The basic key operations are:

- “Press and release the key immediately” or “Press the key”  
= normal key operation during measurement
- “Press and hold the key”







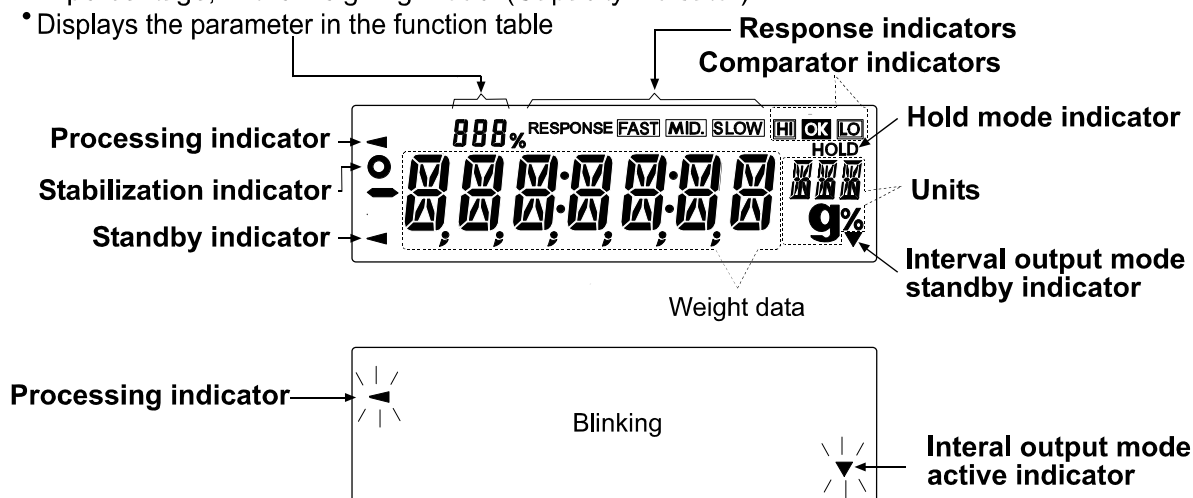

## Display symbols

- Number of statistical data (Statistical calculation mode)
- Displays the weight data relative to the weighing capacity, in percentage, in the weighing mode (Capacity indicator)
- Displays the parameter in the function table



Each key, when pressed or when pressed and held, functions as follows:

Key	When pressed	When pressed and held
	Turns the display on or off. The standby indicator is displayed when the display is turned off. The weighing mode is enabled when the display is turned on. This key is available anytime. Pressing the key during operation will interrupt the operation and turn the display off.	
	In the weighing mode, turns the minimum weighing value on or off. In the counting or percent mode, enters the sample storing mode.	Enters the function table mode. Refer to “9. FUNCTION TABLE”.
	Switches the weighing units stored in the function table. Refer to “9-9 Storing Units”.	Enters the response adjustment mode.
	Cancels the operation when performing settings. With the FZ-CT series, enters the calibration mode using the internal mass. (One-touch calibration)	Enters the calibration mode using an external weight.
	Outputs the weight data to a printer or personal computer using the RS-232C serial interface, depending on the function table settings. Confirms the operation when performing settings.	No function at the factory setting By changing the function table: Outputs “Title block” and “End block” for GLP/GMP compliant report. (Refer to “10-2 GLP Report”.)
	Sets the display to zero.	

# 5. WEIGHING

The default settings of the unit of weight are the metric carat (ct) and grams (g).

Pressing the **MODE** key switches the displayed unit, between ct and g.

To use other units, refer to “9-9 Storing Units” on page 37 to store the units.

## 5-1 Basic Operation

- 1 Place a container (carat pan) on the weighing pan, if necessary.

Press the **RE-ZERO** key to cancel the weight (tare). The balance displays **0.000 ct**.

- 2 Place a sample on the pan or in the container.
- 3 Wait for the stabilization indicator to be displayed. Read the value.

While the stabilization indicator is on, pressing the **PRINT** key will output the weight value, using the RS-232C serial interface.

**Note**



Peripheral equipment, that is sold separately, such as 4 Remove the sample and container from the pan.

**Notes**

When other units of weight are stored as described in “9-9 Storing Units”, pressing the **MODE** key switches the displayed unit.

Press the **SAMPLE** key to turn on or off the minimum weighing value.

When the **ON:OFF** key is pressed with a container placed on the weighing pan, the balance displays **0.000 ct** and weighing is started,

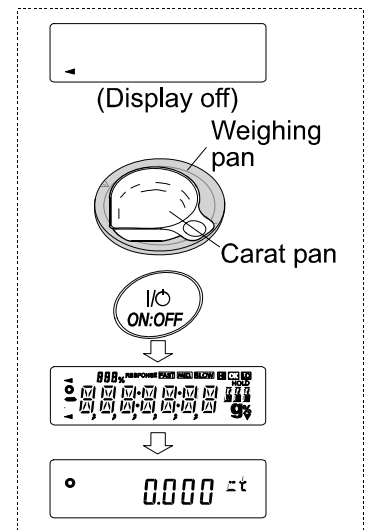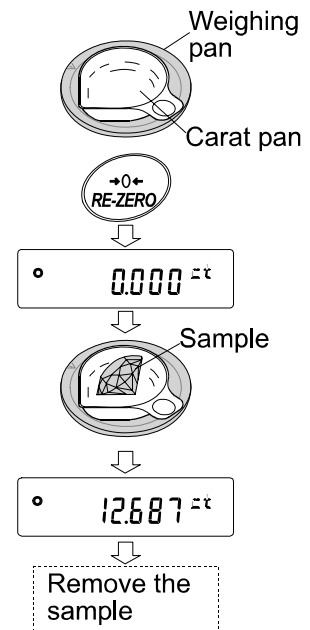


## 6. RESPONSE ADJUSTMENT

This function stabilizes the weight value, reducing the influence on weighing that is caused by drafts and vibration at the place where the balance is installed.


The function has three stages as follows and can be changed by simple key operation.

Indicator	Description
FAST	Fast response, but prone to drafts and vibration. Good for target weighing.
MID.	↕
SLOW	Slow response, but strong against drafts and vibration Good for weighing which requires a stable display.

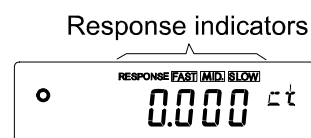

### Operation

- 1 Press and hold the **MODE** key until **RESPONSE** is displayed. And then, release the key.
- 2 Press the **MODE** key to select a rate of the response adjustment. Either **FAST**, **MID.** or **SLOW** can be selected.
- 3 After a few seconds of inactivity, or when the **PRINT** key is pressed, the balance displays **End**. Then, it returns to the weighing mode and displays the updated response indicator. The response indicator remains displayed for a while.

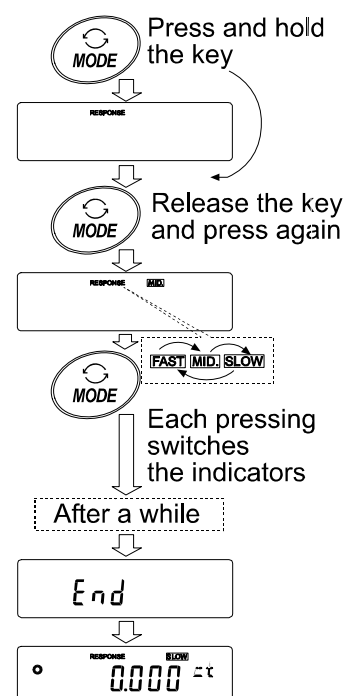

### Note

Setting the response rate automatically changes the “Condition (*Cond*)” and “Display refresh rate (*SPd*)” parameters of “Environment, Display (*bRSFnC*)” in the function table, as shown below:

Indicator	<i>Cond</i> (Condition)	<i>SPd</i> (Display refresh rate)
FAST	0	1 (10 times/second)
MID.	1	0 (5 times/second)
SLOW	2	0 (5 times/second)

When the balance is to be used with other setting combinations, set each parameter in the function table.

# 7. CALIBRATION

## 7-1 Calibration Mode

**Calibration / Calibration test** (Calibration test does not perform calibration.)

- Calibration Using the Internal mass (One-touch calibration, only for the FZ-CT series)
- Calibration using an external weight
- Calibration test using the internal mass (Only for the FZ-CT series.)
- Calibration test using an external weight

### Terms

The following terms are defined as follows:

- External weight = A weight that you have. Referred to as a calibration weight when used for calibration.
- Calibration weight = A weight used for calibration
- Target weight = A weight used for calibration test

### Caution

- When calibrating, be sure to install the provided large breeze break.
- Calibration adjusts the balance for accurate weighing.  
Besides periodic calibration and before each use, perform calibration when:
  - The balance is installed for the first time.
  - The balance has been moved.
  - The ambient environment has changed.
- Do not allow vibration or drafts to affect the balance during calibration.
- To output the GLP/GMP compliant report using the RS-232C serial interface, set "GLP output ( *info* )" of "Data output ( *dout* )". For details, refer to "9. FUNCTION TABLE".
- Calibration test is available only when "GLP output ( *info* )" of "Data output ( *dout* )" is set to "1" or "2".

### Caution on using an external weight

- The accuracy of an external weight will influence the accuracy of weighing. Select an appropriate weight as listed below:

Model	Usable calibration weight	Adjustable range
FZ-1200CT / FX-1200CT	250 g, <b>200 g</b> , 100 g, 50 g, 20 g	-0.0150 g to +0.0150 g
FZ-700CT / FX-700CT	150 g, <b>100 g</b> , 50 g, 20 g	
FZ-500CT / FX-500CT	<b>100 g</b> , 50 g, 20 g	

The calibration weight in bold type: factory setting

The calibration weight value can be adjusted within the range above.

### Display



- This indicator means "the balance is measuring calibration data". Do not allow vibration or drafts to affect the balance while this indicator is displayed.

## 7-2 Calibration Using the Internal Mass (One-Touch Calibration, only for the FZ-CT series)

---

This function calibrates the balance using the internal mass. The only operation required is to press the **CAL** key. (The FX-CT series does not have the one-touch calibration function.)

### Operation

- 1 Connect the AC adapter and warm up the balance for at least one hour with nothing on the weighing pan.
- 2 Press the **CAL** key.
- 3 The balance displays **LRIn** and performs calibration using the internal mass. Do not allow vibration or drafts to affect the balance.
- 4 The balance displays **End** after calibration. If the “GLP output (inFo)” parameter of the function table is set to “1” or “2”, the balance displays **GLP** and outputs “Calibration Report” using the RS-232C interface. For details on the calibration report format, refer to “10-2 GLP Report”.
- 5 The balance automatically returns to the weighing mode after calibration.

### About the internal mass

The value of the internal mass may change due to corrosion or other damage caused by the operating environment, or due to aging. The internal mass value can be corrected using an external mass. To maintain the weighing accuracy, perform the internal mass value correction periodically.

For details, refer to “7-6 Correcting the internal mass value: 1” and “7-7 Correcting the internal mass value: 2”.



## 7-3 Calibration Test Using the Internal Mass (Only for the FZ-CT series)

- This function tests the balance weighing accuracy using the internal mass and outputs the result.
- This is available only when the “GLP output (  $inF0$  )” parameter is set to “1” or “2”. (Calibration test does not perform calibration.)

1 Connect the AC adapter and warm up the balance at least one hour with nothing on the pan.

2 Refer to “9. FUNCTION TABLEL” to set “GLP output (  $inF0$  )” to “1” or “2”

3 Press and hold the **CAL** key until **[[ in** is displayed, then release the key.

4 The balance measures the zero point.  
Prevent vibration and drafts to affect the balance.

5 The measured zero point data is displayed.


6 The balance measures the internal mass.  
Prevent vibration and drafts to affect the balance.

7 The value of the internal mass is displayed.  
The normal range of the value is as follows:

Model	The internal mass	The normal range
FZ-1200CT	200.000 g	±0.002 g
FZ-700CT	100.000 g	
FZ-500CT		

8 The calibration test report is output using the RS-232C interface.

9 The balance automatically returns to the weighing mode.

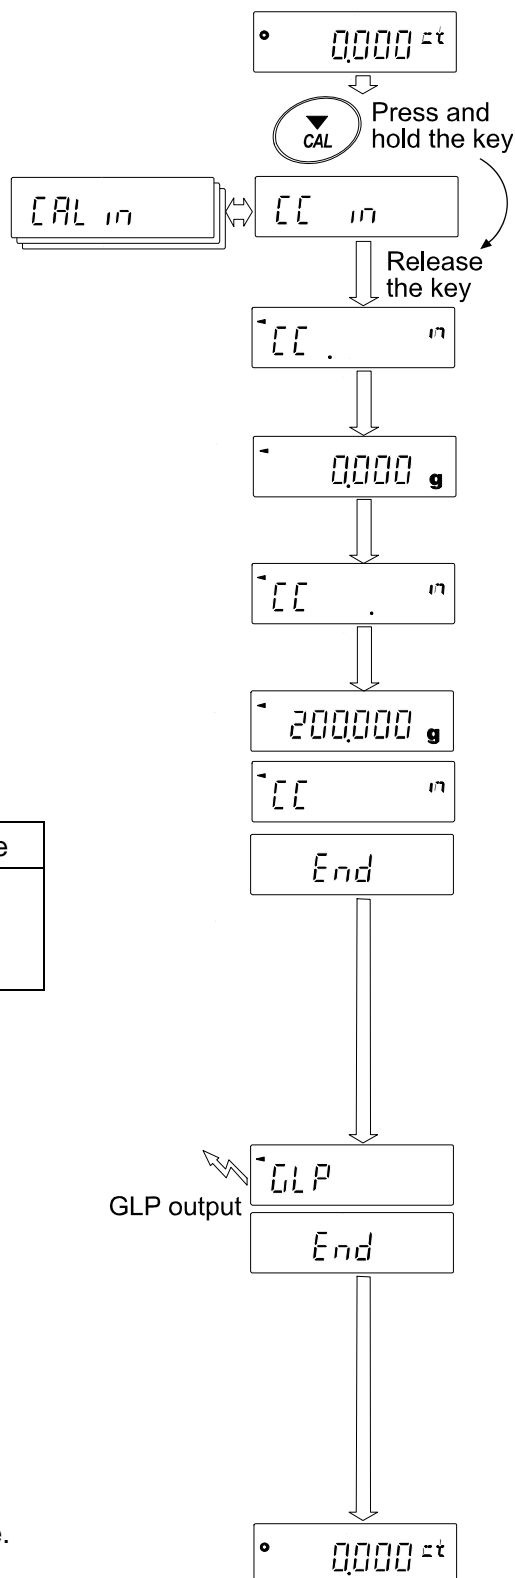

## 7-4 Calibration Using an External Weight

This function calibrates the balance using an external weight.

### Operation

- 1 Connect the AC adapter and warm up the balance for at least one hour with nothing on the pan.
- 2 Press and hold the **[CAL]** key until **[CAL out]** is displayed, and then release the key.
- 3 The balance displays **[CAL 0]**.
  - If you want to change the calibration weight (a list of usable weights is shown on page 13), press the **[SAMPLE]** key and proceed to step 4.
  - If you use the calibration weight value stored in the balance, proceed to step 5.
- 4 Specify the calibration weight value as follows:

**[SAMPLE]** key      To switch the display condition to: "All of the segments blinking" (calibration weight selection mode) or "The last three digits blinking" (value adjustment mode).

**[RE-ZERO]** key (To increase the value)

**[MODE]** key (To decrease the value)


To select the calibration weight or adjust the value.

**[PRINT]** key

To store the new weight value. Even if the AC adapter is removed, the data is maintained in non-volatile memory.


**[CAL]** key

To cancel the operation and return to **[CAL 0]**.

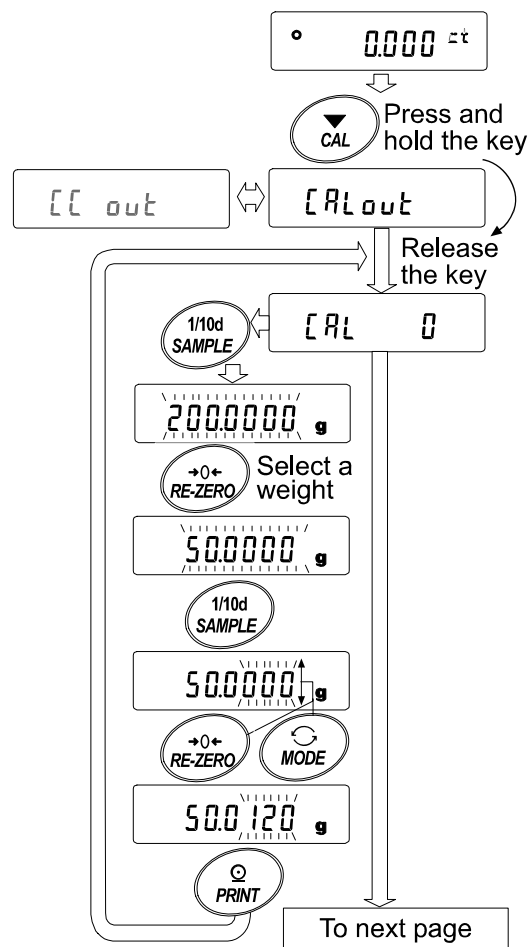

e.g. Calibration weight value  
50.0120 g

- 5 Confirm that there is nothing on the pan and press the **PRINT** key. The balance measures the zero point. Do not allow vibration or drafts to affect the balance.  
The balance displays the calibration weight value.
- 6 Place the displayed calibration weight on the pan and press the **PRINT** key. The balance measures the calibration weight. Do not allow vibration or drafts to affect the balance.
- 7 The balance displays **End**. Remove the weight from the pan.
- 8 When the GLP output is set, the balance displays **GLP** and outputs "Calibration Report".
- 9 The balance automatically returns to the weighing mode.
- 10 Press the **MODE** key to select the gram mode. Place the calibration weight on the pan and confirm that the value displayed is within  $\pm 0.002$  g of the calibration weight value. If it is not within the range, check the ambient conditions such as drafts and vibration, also check the weighing pan. Then, repeat steps 1 to 9.

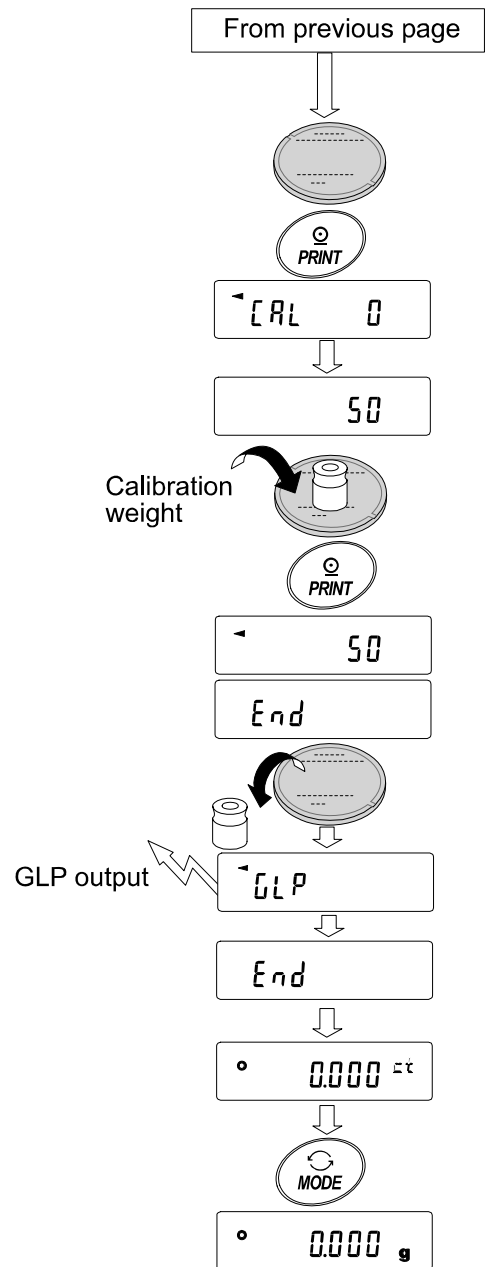

## 7-5 Calibration Test Using an External Weight

This function tests the balance weighing accuracy using an external weight and outputs the result. This is available only when the “GLP output (INF0)” parameter is set to “1” or “2”. (Calibration test does not perform calibration.)

### Operation

- 1 Connect the AC adapter and warm up the balance for at least one hour with nothing on the pan.
- 2 Press and hold the **CAL** key until **[[out** is displayed, and then release the key.
- 3 The balance displays **[[ 0**.
  - If you want to change the target weight (a list of usable weights is shown on page 13), press the **SAMPLE** key and proceed to step 4.
  - If you use the target weight value stored in the balance, proceed to step 5.
- 4 Specify the target weight value as follows:

**SAMPLE** key      To switch the display condition to: “All of the segments blinking” (target weight selection mode) or “The last three digits blinking” (value adjustment mode).

**RE-ZERO** key (To increase the value)

**MODE** key (To decrease the value)


To select the target weight or adjust the value.

**PRINT** key

To store the new weight value. Even if the AC adapter is removed, the data is maintained in non-volatile memory.

**CAL** key

To cancel the operation and return to **[[ 0**.

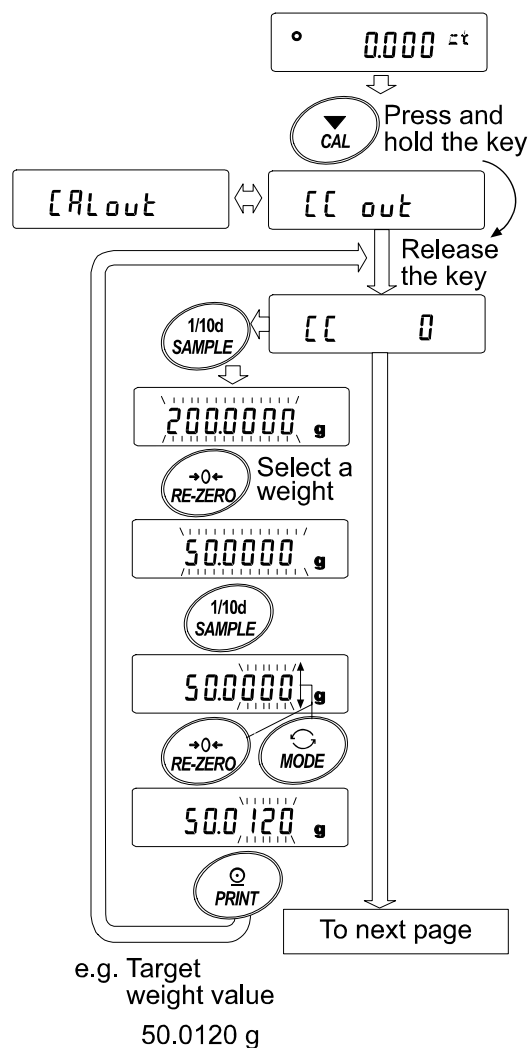

- Confirm that there is nothing on the pan and press the **PRINT** key. The balance measures the zero point and displays the measured value. Do not allow vibration or drafts to affect the balance.


The balance displays the target weight value.

- Place the displayed target weight on the pan and press the **PRINT** key. The balance measures the target weight and displays the measured value. Do not allow vibration or drafts to affect the balance.

- The balance displays **End**. Remove the weight from the pan.

- When the GLP output is set, the balance displays **GLP** and outputs "Calibration Test Report".

- The balance automatically returns to the weighing mode.

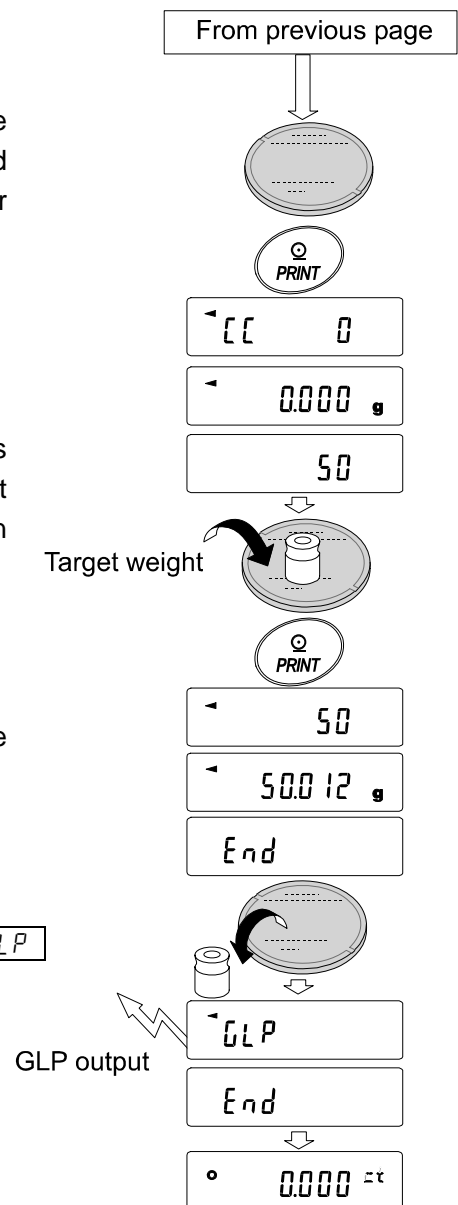

## 7-6 Correcting the Internal Mass Value: 1 (Only for the FZ-CT series)


- The FZ-CT series balance can correct the internal mass value using an external weight.  
Method 1: Calibrate the balance using the internal mass. Measure the external weight. Calculate the correction value. And store it in the balance.
- The adjustable range of the internal mass value is as follows:

Model	Correction reference value	Adjustable range
FZ-1200CT	200 g	-0.0150 g to +0.0150 g
FZ-700CT	100 g	
FZ-500CT		

### Operation


Example : Correcting the weight value by +0.0030 g in 200 g using the FZ-1200CT.

If correcting the weight value by +0.0030 g in 100 g, use the correction value of +0.0060 g as the correction reference value is 200 g.

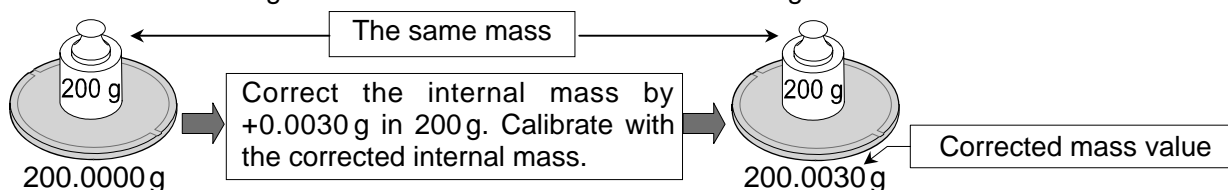

- Perform calibration using the internal mass (one-touch calibration). Place the external weight on the weighing pan to obtain the correction value.
- With the factory setting, the balance can not correct the internal mass value. Refer to "8. FUNCTION SWITCH AND INITIALIZATION" and set the internal mass value correction switch to 1.
- Press the **MODE** key to select the gram mode.
- Press and hold the **SAMPLE** key to display **bASFnC**.
- Press the **SAMPLE** key several times until **[5 in 1]** is displayed.
- Press the **PRINT** key.  
Correct the internal mass value using the following keys:
 

<b>RE-ZERO</b> key	To increase the value by one.	The balance displays -0.0150 g after +0.0150 g.
<b>MODE</b> key	To decrease the value by one.	
<b>PRINT</b> key	To store the correction value and display the next menu item of the function table.	
<b>CAL</b> key	To cancel the operation and display the next menu item of the function table.	
- Press the **CAL** key to return to the weighing mode.
- Press the **CAL** key to perform calibration using the internal mass.
- Confirm that the internal mass value has been corrected properly by placing the external weight on the weighing pan.  
If the internal mass value has not been corrected properly, repeat the procedure to adjust the correction value.

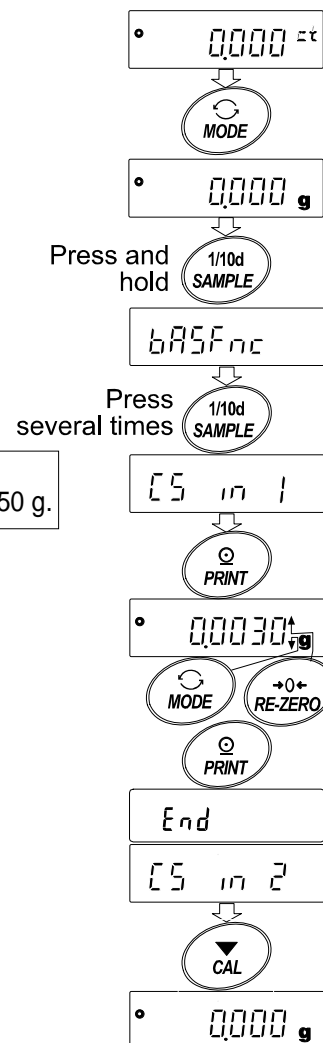

## 7-7 Correcting the Internal Mass Value: 2 (Only for the FZ-CT series)

- The FZ-CT series balance can correct the internal mass value using an external weight.  
Method 2: Calibrate the balance using the external weight. The balance performs automatic calibration using the internal mass, corrects the internal mass value and stores it in the balance. The corrected mass value is maintained in non-volatile memory even if the AC adapter is removed.
- The usable calibration weights and the adjustable range are as follows:

Model	Usable calibration weight	Adjustable range
FZ-1200CT	250 g, <b>200 g</b> , 100 g, 50 g, 20 g	-0.0150 g to +0.0150 g
FZ-700CT	150 g, <b>100 g</b> , 50 g, 20 g	
FZ-500CT	<b>100 g</b> , 50 g, 20 g	


The calibration weight in bold type: factory setting

The calibration weight value can be adjusted within the range above.

### Operation

- With the factory setting, the balance can not correct the internal mass value. Refer to "8. FUNCTION SWITCH AND INITIALIZATION" and set the internal mass value correction switch to 1.
- Press the **MODE** key to select the gram mode.
- Press and hold the **SAMPLE** key to display **bASFnC**.
- Press the **SAMPLE** key several times until **[CS in 2]** is displayed.  
If **[CS in 2]** is not displayed, perform step 1.
- Press the **PRINT** key to display **[CAL 0]**.  
Refer to "7-4 Calibration Using an External Weight", to perform the calibration.
- After calibration, remove the weight. The balance displays **READY**.  
Close the door of the breeze break. Press the **PRINT** key.
- [CAL SET]** is displayed and the balance corrects the internal mass value automatically
- After correcting the internal mass value, the balance displays **[CAL in 1]**, and performs the calibration automatically using the corrected internal mass value.
- The balance displays **End** and returns to the weighing mode.
- Confirm that the internal mass value has been corrected properly by placing the external weight used for the correction procedure on the weighing pan.  
If the internal mass value has not been corrected properly, repeat the procedure to adjust the correction value.

Calibration using an external weight

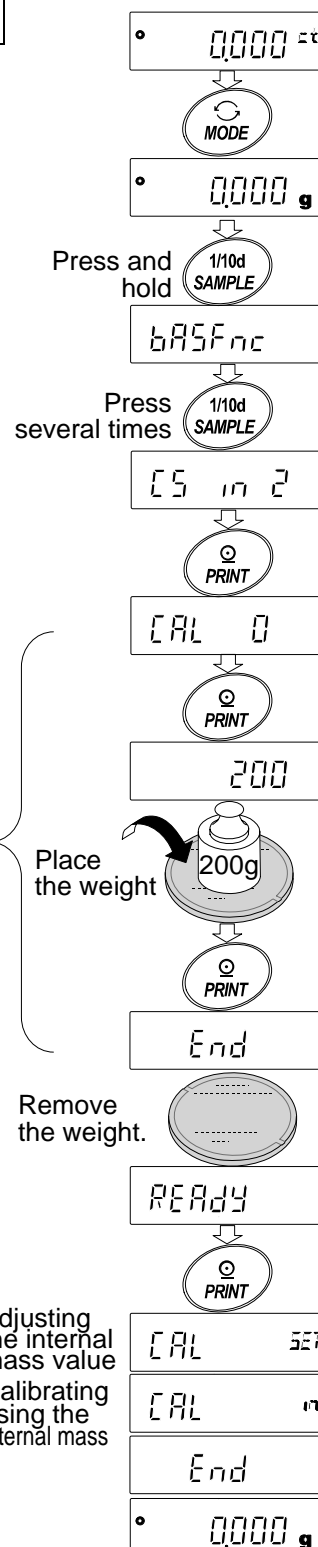

Adjusting the internal mass value  
Calibrating using the internal mass


# 8. FUNCTION SWITCH AND INITIALIZATION

## 8-1 Permit or Inhibit


The balance stores parameters that must not be changed unintentionally. There are two switches for the purpose of protecting these parameters. Each switch can select either “permit” or “inhibit”. The “inhibit” protects parameters against unintentional operations.

	FZ-CT series	FX-CT series
Function switch	<ul style="list-style-type: none"> <li>- Function table</li> <li>- Calibration using the internal mass</li> <li>- Calibration using an external weight</li> <li>- Internal mass correction</li> </ul>	<ul style="list-style-type: none"> <li>- Function table</li> <li>- Calibration using an external weight</li> </ul>

### Switches (FZ-CT series)

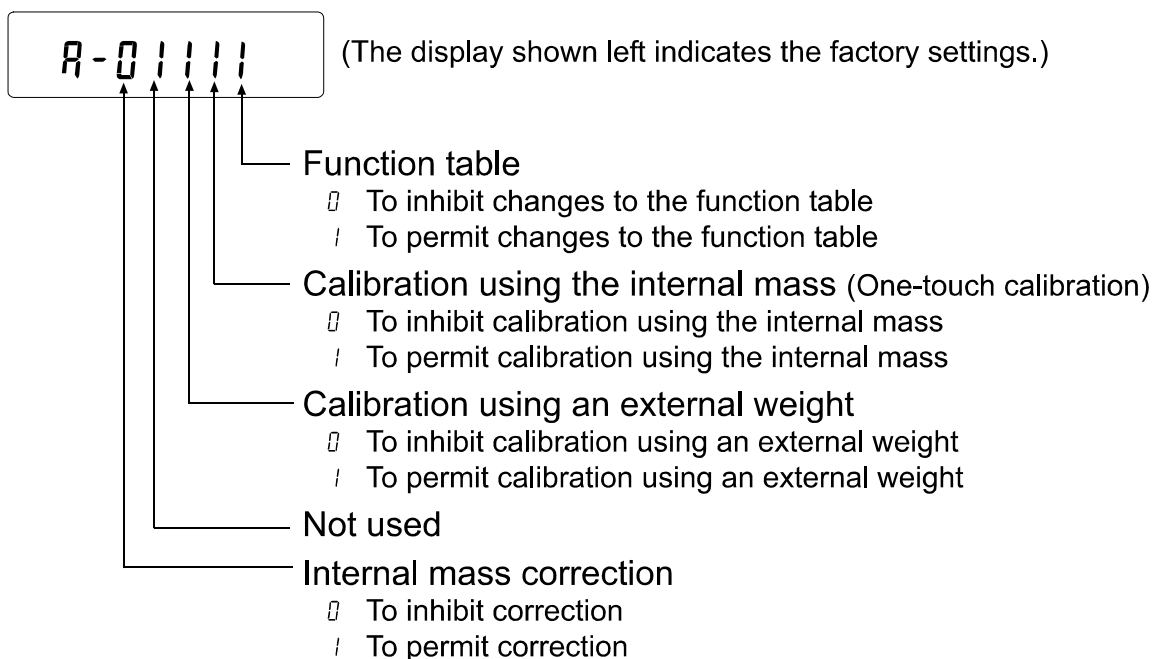

### Switches (FX-CT series)

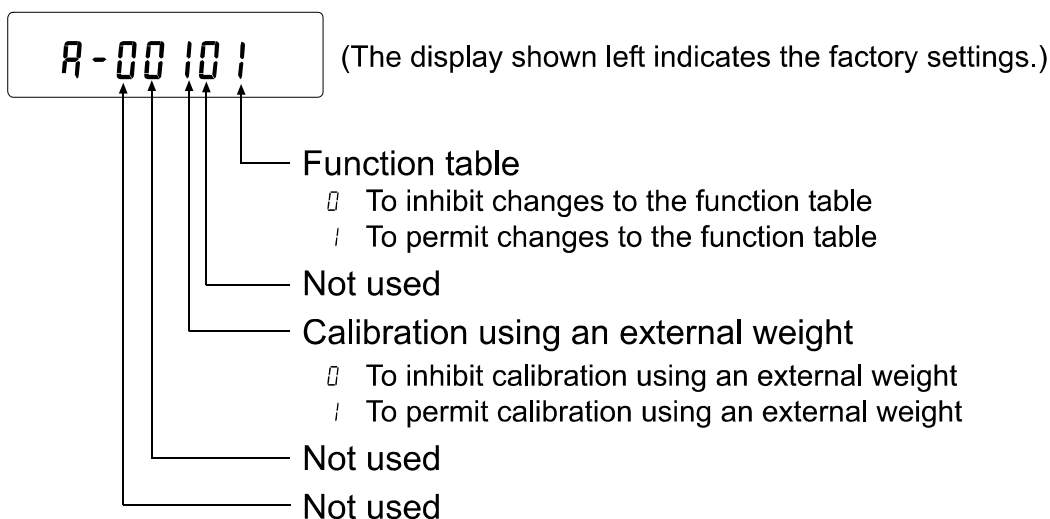



## Operation

- 1 Press the **ON:OFF** key to turn off the display.
- 2 While pressing and holding the **PRINT** key and the **SAMPLE** key, press the **ON:OFF** key. The balance displays **P5**.
- 3 Press the **PRINT** key. Then the balance displays the function switches.
- 4 Set the switches using the following keys.
 

<b>SAMPLE</b> key	To select the switch to change the parameter.
<b>RE-ZERO</b> key	To change the parameter of the switch selected.
	<b>0</b> : To inhibit changes. <b>1</b> : To permit changes
<b>PRINT</b> key	To store the new parameter and return to the weighing mode.
<b>CAL</b> key	To cancel the operation ( <b>[Lr]</b> is displayed.) To return to the weighing mode, press the <b>CAL</b> key once again.

## 8-2 Initializing the Balance

This function returns the following parameters to factory settings.


- Calibration data
- Function table
- The sample unit mass value (counting mode), 100% reference mass value (percent mode)
- External calibration weight
- Function switch settings
- Statistical data
- Internal mass correction value (Only for the FZ-CT series)

### Note

**Be sure to calibrate the balance after initialization.**

### Operation

- 1 Press the **ON:OFF** key to turn off the display.
- 2 While pressing and holding the **PRINT** key and the **SAMPLE** key, press the **ON:OFF** key. The balance displays **P5**.
- 3 Press the **SAMPLE** key to display **[Lr]**.
- 4 Press the **PRINT** key.  
To cancel this operation, press the **CAL** key.
- 5 Press the **RE-ZERO** key.
- 6 Press the **PRINT** key to initialize the balance.  
The balance automatically returns to the weighing mode.

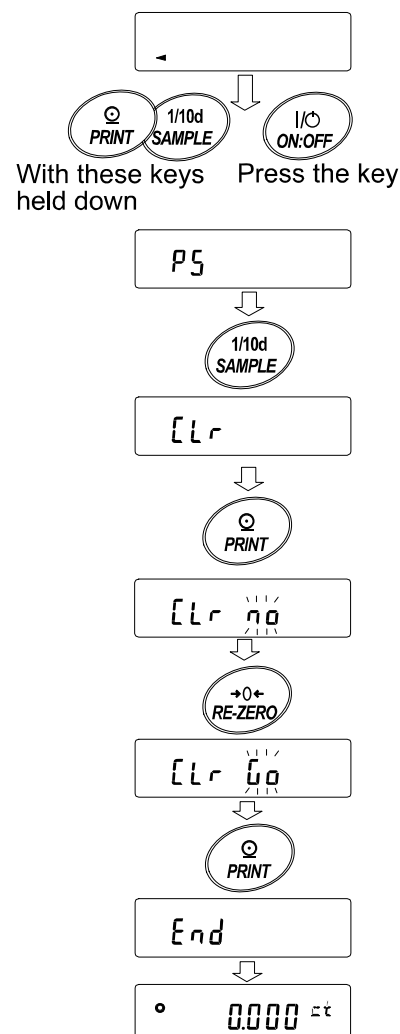

# 9. FUNCTION TABLE


The function table reads or rewrites the parameters that are stored in the balance. These parameters stored, even if the AC adapter is removed, are maintained in non-volatile memory.

## 9-1 Structure and Sequence of the Function Table

The function table menu consists of two layers. The first layer is the “Class” and the second layer is the “Item”. Each item stores a parameter.

### Example

This example sets “Auto print mode A” for “Data output mode” and “10 digits” for “Auto print difference”.

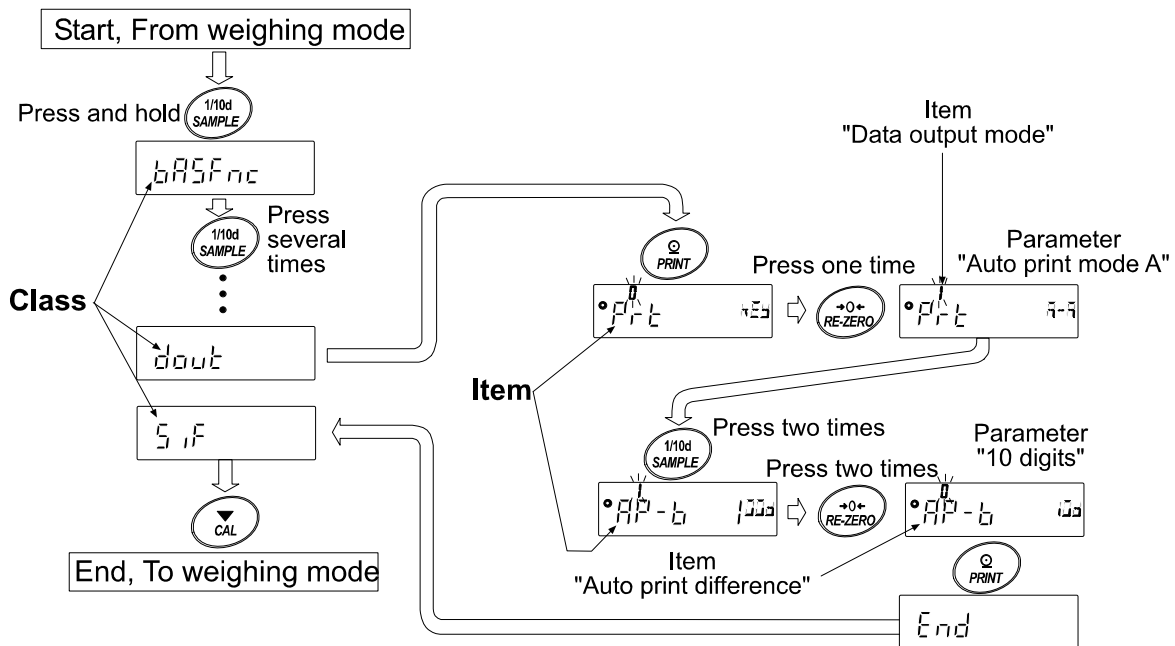

## 9-2 Display and Keys

Display/Key	Description
	The symbol “○” indicates that the parameter displayed is in effect.
	When pressed and held in the weighing mode, enters the function table mode. Selects the class or item in the function table mode.
	Changes the parameter.
	When a class is displayed, moves to an item in the class. When an item is displayed, stores the new parameter and displays the next class.
	When an item is displayed, cancels the new parameter and displays the next class. When a class is displayed, exits the function table mode and returns to the weighing mode.

## 9-3 Details of the Function Table

Class	Item and Parameter	Description				
bRSFnC Environment Display	Cond Condition	0	Fast response, sensitive value	FAST	With "Hold I", sets the averaging time.	
		1		MID		
		2	Slow response, stable value	SLOW		
	St-b Stability band width	0	Stable range is ±1 digit			The stabilization indicator illuminates when the display fluctuation is within the range. With "Hold I", sets the stabilization range.
		1				
		2	Stable range is ±3 digits			
	Hold Hold function	0	OFF			Holds the display when stable in animal mode. With "Hold I", HOLD turns on.
		1	ON			
	trc Zero tracking	0	OFF			Keeps zero display by tracking zero drift.
		1	Normal			
		2	Strong			
		3	Very strong			
	SPd Display refresh rate	0	5 times/second			Period to refresh the display
		1	10 times/second			
Pnt Decimal point	0	Point (.)			Decimal point format	
	1	Comma (,)				
P-on Auto display-ON	0	OFF			Turns on the weighing mode display when the AC adapter is connected.	
	1	ON				
POFF Auto display-OFF	0	OFF			Turns off the display after 10 minutes of inactivity.	
	1	ON (10 minutes)				
r-n0 Display at start	0	Displays			Select whether or not to display the minimum weighing value at weighing start.	
	1	Does not display				
bEEP Beep	0	Does not sound			Select whether or not to sound the beep when operating on keys.	
	1	Sounds				
CL Add * Clock		Refer to "9-15 Clock and Calendar Function".			Confirms and sets the time and date. The time and date are added to output data.	
CP Fnc Comparator	CP Comparator mode	0	No comparison			
		1	Comparison, excluding "near zero" when stable value or overloaded			
		2	Comparison, including "near zero" when stable value or overloaded			
		3	Continuous comparison, excluding "near zero"			
		4	Continuous comparison, including "near zero"			
	bEP- LO buzzer	0	OFF			
		1	ON			
	bEP- OK buzzer	0	OFF			
		1	ON			
	bEP- HI buzzer	0	OFF			
1		ON				

\* : Only for the FZ-CT series

▪ : Factory settings. Digit is a unit of minimum weighing value

Class	Item and Parameter	Description		
[P H]	Upper limit			
[P L]	Lower limit			
<i>dout</i> Data output	<i>Pr-t</i> Data output mode	0	Key mode	Accepts the [PRINT] key only when the display is stable.
		1	Auto print mode A (Reference = zero)	Outputs data when the display is stable and conditions of <i>RP-P</i> , <i>RP-b</i> and the reference value are met.
		2	Auto print mode B (Reference = last stable value)	Outputs data at the specified display refresh rate. e.g.: Used when connected to the AD-8920A remote display.
		3	Stream mode	Outputs data at the specified display refresh rate. e.g.: Used when connected to the AD-8920A remote display.
		4	Key mode B (Immediately)	Accepts the [PRINT] key regardless of the display condition.
		5	Key mode C (When stable)	Accepts the [PRINT] key immediately when the display is stable, or waits for the display to be stable when not.
		6	Interval output mode	Uses interval output mode.
	<i>RP-P</i> Auto print polarity	0	Plus only	Displayed value > Reference
		1	Minus only	Displayed value < Reference
		2	Both	Regardless of displayed value
	<i>RP-b</i> Auto print difference	0	10 digits	Difference between reference value and displayed value
		1	100 digits	
		2	1000 digits	
	<i>int</i> Interval time	0	Every display refresh	Interval time for the interval output mode (With <i>Pr-t</i> 6)
		1	2 seconds	
		2	5 seconds	
		3	10 seconds	
		4	30 seconds	
		5	1 minute	
		6	2 minute	
		8	10 minute	
	<i>S-t-d*</i> Time/Date output	0	No output	
		1	Time only	
		2	Date only	
		3	Time and date	
	<i>S-id</i> ID number output	0	No output	Selects whether or not the ID number is output.
		1	Output	
	<i>PUSE</i> Data output pause	0	No pause	Selects the data output interval.
		1	Pause (1.6 seconds)	
	<i>RF-F</i> Auto feed	0	Not used	Selects whether or not automatic feed is performed.
		1	Used	
	<i>inFo</i> GLP output	0	No output	Selects the output format for the GLP/GMP compliant report.
		1	AD-8121 format	
		2	General data format	
	<i>Rr-d</i> Zero after output	0	Not used	Adjusts zero automatically after data is output
		1	Used	

\*: Only for the FZ-CT series

▪ Factory settings. Digit is a unit of minimum weighing value

Class	Item and Parameter		Description	
5.1F Serial interface	bPS Baud rate	0	600 bps	
		1	1200 bps	
		▪ 2	2400 bps	
		3	4800 bps	
		4	9600 bps	
		5	19200 bps	
	bLPr Data bit, parity bit	▪ 0	7 bits, even	
		1	7 bits, odd	
		2	8 bits, none	
	ErLF Terminator	▪ 0	CR LF	CR: ASCII code 0Dh LF: ASCII code 0Ah
		1	CR	
	tYPE Data format	▪ 0	A&D standard format	Refer to "9-12 Description of the Item "Data Format"".
		1	DP format	
		2	KF format	
3		MT format		
4		NU format		
5		CSV format		
t-UP Timeout	0	No limit	Selects the wait time to receive a command.	
	▪ 1	1 second		
ErCd AK, Error code	▪ 0	No output	AK:ASCII code 06h	
	1	Output		
nLt Programmable-unit (Multi-unit)	Sets an arbitrary coefficient.		Available only when programmable-unit mode is selected.	
Unit	Refer to "9-8 Units".			
id ID number	Refer to "10. ID NUMBER AND GLP REPORT"			
AP Fnc Application	APP Application function	▪ 0	Normal weighing mode	
		1	Capacity indicator	
		2	Statistical calculation mode	
	StAF Statistical function mode output items	▪ 0	Number of data, sum	
		1	Number of data, sum, maximum, minimum, average, range (maximum-minimum)	
		2	Number of data, sum, maximum, minimum, average, range (maximum-minimum), standard deviation, coefficient of variation	
3	Number of data, sum, maximum, minimum, average, range (maximum-minimum), standard deviation, coefficient of variation, relative error			
[5 in 1* Internal mass value correction: Method 1		Refer to "7. CALIBRATION".	Displayed only when the function switch (internal mass value correction switch) is set to 1.	
[5 in 2* Internal mass value correction: Method 2				

\*: Only for the FZ-CT series

▪ : Factory settings.


### Caution

The balance may not transmit the data completely at the specified display refresh rate, depending on the baud rate.

## 9-4 Description of the Class “Environment, Display”

### Condition ( $\text{Cond}$ )

$\text{Cond } 0$



$\text{Cond } 2$

This parameter is for sensitive response to the fluctuation of a weight value. Used for powder target weighing, weighing a very light sample or when quick response weighing is required.

After setting, the balance displays **FAST**.

This parameter is for stable weighing with slow response. Used to prevent a weight value from drifting due to vibration or drafts.

After setting, the balance displays **SLOW**.

#### Note

With “Hold function (  $\text{Hold}$  )” set to “ON (  $I$  )”, this item is used to set the averaging time.

### Stability band width ( $\text{St-b}$ )

This item controls the width to regard a weight value as a stable value. When the fluctuation per second is less than the parameter, the balance displays the stabilization indicator and outputs the data. The parameter influences the “Auto print mode”

$\text{St-b } 0$



$\text{St-b } 2$

This parameter is for sensitive response of the stabilization indicator. Used for exact weighing.

This parameter ignores slight fluctuation of a weight value. Used to prevent a weight value from drifting due to vibration or drafts.

#### Note

With “Hold function (  $\text{Hold}$  )” set to “ON (  $I$  )”, this item is used to set the stabilization range.

### Hold function ( $\text{Hold}$ ) (Animal weighing mode)

This function is used to weigh an unstable sample such as an animal.

When the weight data is over the weighing range from zero and the display fluctuation is within the stabilization range for a fixed period of averaging time, the processing indicator illuminates and the balance displays the average weight of the sample. When the sample is removed from the weighing pan, the display returns to zero automatically.

This function is available only when the hold function parameter is set to “  $I$  ” (the hold mode indicator **HOLD** illuminates) and any weighing unit other than the counting mode is selected.

The stabilization range and averaging time are set in “Condition (  $\text{Cond}$  )” and “Stability band width (  $\text{St-b}$  )”.

Weighing range	Averaging time		Stabilization range (Ratio of fluctuation to the weight value)	
0.200 g or over	$\text{Cond } 0$	2 seconds Faster	$\text{St-b } 0$	Lesser (6.25%)
	$\text{Cond } 1$	4 seconds   More accurate	$\text{St-b } 1$	(12.5%)
	$\text{Cond } 2$	8 seconds	$\text{St-b } 2$	Greater (16.7%)

## Zero tracking ( $t_{rc}$ )

This function tracks zero point drift caused by changes in the environment and stabilizes the zero point. When the weight data is only a few digits, turn the function off for accurate weighing.

### Note

**Digit, when used for the FZ-CT and FX-CT series balances, indicates a unit of minimum weighing value.**

$t_{rc} 0$	The tracking function is not used. Used for weighing a very light sample.
$t_{rc} 1$	The tracking function is used. Normal zero tracking.
$t_{rc} 2$	The tracking function is used. Strong zero tracking.
$t_{rc} 3$	The tracking function is used. Very strong zero tracking.

## Display refresh rate ( $SPd$ )

Period to refresh the display. This parameter influences “Stream mode” along with “Baud rate” and “Data output pause”

### Note

**This item is selected automatically when the response rate is changed.**

## Decimal point ( $P_{nt}$ )

The decimal point format can be selected.

## Auto display-ON ( $P_{on}$ )

When the AC adapter is connected, the display is automatically turned on in the weighing mode, without the ON:OFF key operation. Used when the balance is built into an automated system. A one hour warm-up is necessary for accurate weighing.

## Auto display-OFF ( $P_{off}$ )

When the weight value is 0.5 g or less and no operation such as key input or command receipt is performed (inactive state) for 10 minutes, the display is automatically turned off and the standby indicator is illuminated.

(The power consumption is the same for the weighing mode and the display-off state.)

## 9-5 Description of the Item “Data Output Mode”

---

The parameter setting of the “Data output mode (  $P_{rt}$  )” applies to the performance when the data is transmitted using the RS-232C serial interface.

### Key mode

When the PRINT key is pressed with the stabilization indicator turned on, the balance outputs the weight data and the display blinks one time.

Required setting      $d_{out}$       $P_{rt} 0$      Key mode

## Auto print modes A and B

When the displayed value is stable and the conditions of “Auto print polarity”, “Auto print difference” and reference value are met, the balance outputs the weight data.

When the **PRINT** key is pressed with the stabilization indicator turned on, the balance outputs the data and the display blinks one time.

Mode A: Example “For outputting the weight value each time a sample is added (or removed), with “*Pr-d*” set to “1” (to adjust zero after the data is output).”

Required setting	<i>dout</i>	<i>Pr-t 1</i>	Auto print mode A (reference = zero)
	<i>dout</i>	<i>RP-P</i>	Auto print polarity
	<i>dout</i>	<i>RP-b</i>	Auto print difference
	<i>dout</i>	<i>Pr-d 1</i>	Adjusts zero automatically.

Mode B: Example “For outputting the weight value while a sample is added.”

Required setting	<i>dout</i>	<i>Pr-t 2</i>	Auto print mode B (reference = last stable value)
	<i>dout</i>	<i>RP-P</i>	Auto print polarity
	<i>dout</i>	<i>RP-b</i>	Auto print difference

## Stream mode

The balance outputs the weight data at the specified display refresh rate, regardless of the display condition. The display does not blink in this mode.

Example	“For monitoring data on the AD-8920A remote display”		
Required setting	<i>dout</i>	<i>Pr-t 3</i>	Stream mode
	<i>bRSFnc</i>	<i>SPd</i>	Display refresh rate
	<i>S iF</i>	<i>bPS</i>	Baud rate

## Caution

**The balance may not transmit the data completely at the specified display refresh rate and baud rate. Set the baud rate higher.**

## Key mode B

When the **PRINT** key is pressed, the balance outputs the weight data, regardless of the display condition. The display does not blink in this mode.

## Key mode C

When the **PRINT** key is pressed with the stabilization indicator turned on, the balance outputs the weight data. When the stabilization indicator is not on, the balance waits for the indicator to turn on and outputs the data. The balance blinks one time in this mode.

## Interval output mode

The weight data is periodically output.

When the **PRINT** key is pressed, the balance starts to output the weight data at a preset interval time. When the **PRINT** key is pressed again, the balance stops outputting the weight data.

Example	“For outputting the weight data periodically.”		
Required setting	<i>dout</i>	<i>Pr-t 6</i>	Interval output mode
	<i>dout</i>	<i>int</i>	Interval time

## Caution

**The balance may not transmit the data completely at the specified interval times and baud rate. Set the baud rate higher.**




## 9-6 Description of the Item “Data Format”


### A&D standard format    *S IF TYPE 0*

This format is used when the peripheral equipment can receive the A&D format. If an AD-8121B printer is used, set the printer to MODE 1 or 2.

- This format consists of fifteen characters excluding the terminator.
- A header of two characters indicates the balance condition.
- The polarity sign is placed before the data with the leading zeros. If the data is zero, the plus sign is used.
- The unit, consisting of three characters, follows the data.
- Output example:

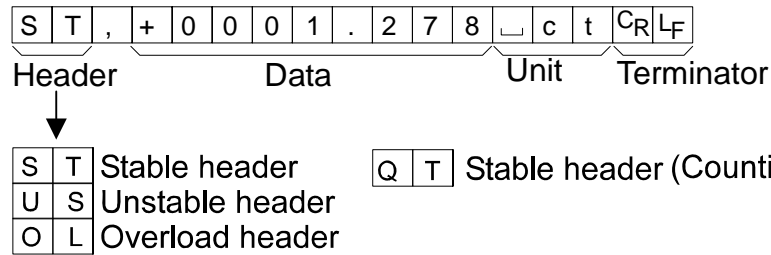


- Print example:

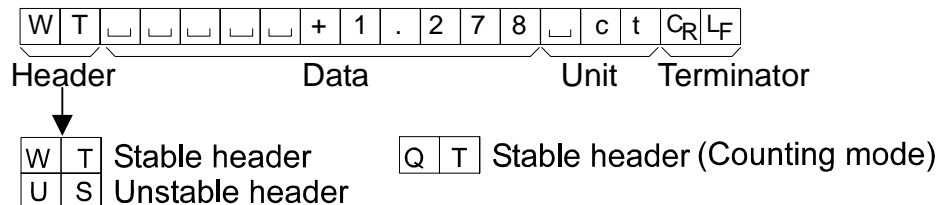

### DP (Dump print) format    *S IF TYPE 1*

This format is suitable for the peripheral equipment that prints the received data as is. When an AD-8121B printer is used, set the printer to MODE 3.


- This format consists of sixteen characters excluding the terminator.
- A header of two characters indicates the balance condition. No overload header is used.
- The polarity sign is placed before the data, with spaces in place of leading zeros, if the data is not zero or overloaded.
- The unit, consisting of three characters, follows the data.

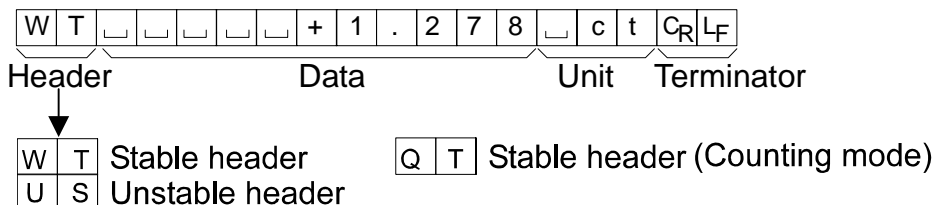

### KF format    5, F TYPE 2

This is the Karl-Fischer moisture meter format and is used when the peripheral equipment can only communicate using this format.


- This format consists of fourteen characters excluding the terminator.
- This format has no header characters.
- The polarity sign is placed before the data, with spaces in place of leading zeros, if the data is not zero or overloaded.
- This format outputs the unit only for a stable value.

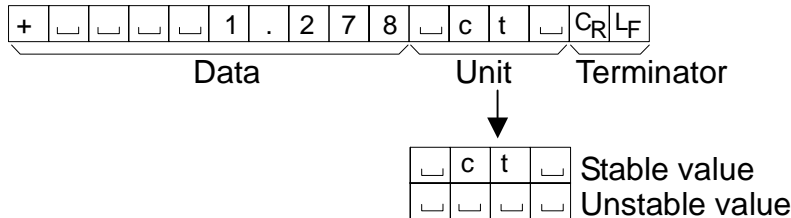

### MT format    5, F TYPE 3

This format is used when the peripheral equipment of other manufacturer is connected. Please note that the connection is not guaranteed.


- A header of two characters indicates the balance condition.
- The polarity sign is used only for negative data.
- The weight data uses spaces in place of the leading zeros.
- The character length of this format changes dependent upon the unit

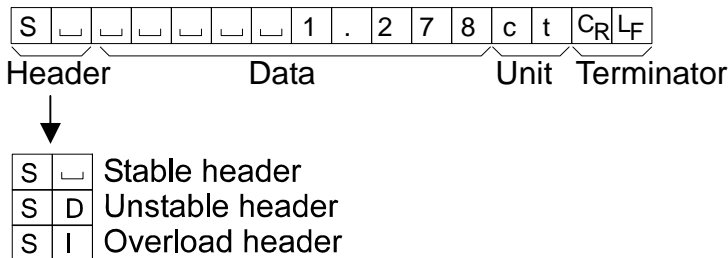

### NU (numerical) format    5, F TYPE 4


This format outputs only numerical data.

- This format consists of nine characters excluding the terminator.
- The polarity sign is placed before the data with the leading zeros. If the data is zero, the plus sign is used.



### CSV format    5, F TYPE 5

- Separates the data of A&D standard format and the unit by a comma (,).
- Outputs the unit even when the data is overloaded.

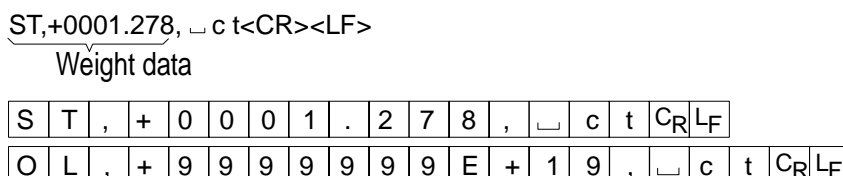

## 9-7 Data Format Examples

### Stable

° 0.127 zt

A&D	S	T	,	+	0	0	0	0	.	1	2	7	␣	c	t	C <sub>R</sub>	L <sub>F</sub>
DP	W	T	␣	␣	␣	␣	␣	+	0	.	1	2	7	␣	c	t	C <sub>R</sub> L <sub>F</sub>
KF	+	␣	␣	␣	0	.	1	2	7	␣	c	t	␣	C <sub>R</sub>	L <sub>F</sub>		
MT	␣	␣	␣	␣	␣	␣	0	.	1	2	7	c	t	C <sub>R</sub>	L <sub>F</sub>		
NU	+	0	0	0	0	.	1	2	7	C <sub>R</sub>	L <sub>F</sub>						

### Unstable

-18.369 zt

A&D	U	S	,	-	0	0	1	8	.	3	6	9	␣	c	t	C <sub>R</sub>	L <sub>F</sub>
DP	U	S	␣	␣	␣	␣	-	1	8	.	3	6	9	␣	c	t	C <sub>R</sub> L <sub>F</sub>
KF	-	␣	␣	␣	1	8	.	3	6	9	␣	␣	␣	␣	C <sub>R</sub>	L <sub>F</sub>	
MT	S	D	␣	␣	␣	-	1	8	.	3	6	9	c	t	C <sub>R</sub>	L <sub>F</sub>	
NU	-	0	0	1	8	.	3	6	9	C <sub>R</sub>	L <sub>F</sub>						

### Overload

Positive error

E zt

A&D	O	L	,	+	9	9	9	9	9	9	9	E	+	1	9	C <sub>R</sub>	L <sub>F</sub>
DP	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	␣	C <sub>R</sub>	L <sub>F</sub>
KF	␣	␣	␣	␣	␣	␣	H	␣	␣	␣	␣	␣	␣	␣	C <sub>R</sub>	L <sub>F</sub>	
MT	S	I	+	C <sub>R</sub>	L <sub>F</sub>												
NU	+	9	9	9	9	9	9	9	9	C <sub>R</sub>	L <sub>F</sub>						

### Overload

Negative error

-E zt

A&D	O	L	,	-	9	9	9	9	9	9	9	E	+	1	9	C <sub>R</sub>	L <sub>F</sub>
DP	␣	␣	␣	␣	␣	␣	␣	-	E	␣	␣	␣	␣	␣	␣	C <sub>R</sub>	L <sub>F</sub>
KF	␣	␣	␣	␣	␣	␣	L	␣	␣	␣	␣	␣	␣	␣	C <sub>R</sub>	L <sub>F</sub>	
MT	S	I	-	C <sub>R</sub>	L <sub>F</sub>												
NU	-	9	9	9	9	9	9	9	9	C <sub>R</sub>	L <sub>F</sub>						

␣ Space, ASCII 20h

C<sub>R</sub> Carriage Return, ASCII 0Dh


L<sub>F</sub> Line Feed, ASCII 0Ah

Units	Display	A&D	D.P.	KF	MT
g	g	□□g	□□g	□g□□	□g
Counting mode	PCS	□P□	□P□	□p□s	□P□S
Precent mode	%	□□%	□□%	□%□□	□%
Ounce (Avoir)	OZ	□o□	□o□	□o□□	□o□
Pound	Lb	□l□	□l□	□l□□	□l□
Pound Ounce	□ OZ	□o□	□o□	□o□□	□o□
Troy Ounce	OZt	o□t	o□t	□o□t	□o□t
Metric Carat	ct	□c□	□c□	□c□□	□c□
Momme	mom	m□m	m□m	□m□m	□m□
Pennyweight	dwt	d□w□	d□w□	□d□w□	□d□w□
Grain	GN	□G□	□G□	□g□r□	□GN
Tael (HK general, Singapore)	tl	□t□	□t□	□t□s	□t□
Tael (HK, jewelry)	tl	□t□	□t□	□t□h	□t□
Tael (Taiwan)	tl	□t□	□t□	□t□t	□t□
Tael (China)	tl	□t□	□t□	□t□c	□t□
Tola (India)	tol	□□t	□□t	□t□o□	□t
Messghal	MES	m□e□	m□e□	□M□S□	□m
Multi	MLT	M□L□	M□L□	□M□L□	□M□L□

□ Space, ASCII 20h

## 9-8 Units

With the FZ-CT and FX-CT series balances, the following weighing units and weighing modes are available:

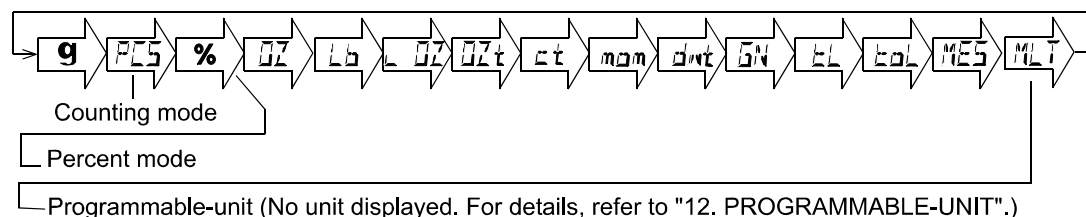

A unit or mode can be selected and stored in the function table as described on page 37.

If a weighing mode (or unit of weight) has been turned off, that mode or unit will be missing in the sequence. Tael has four varieties, one of which can be selected and installed at the factory.

For details about the units and modes, see the table below:

Name (unit, mode)	Display	Function table (Storing mode)	Conversion factor 1 g =
Gram	g	g	1 g
Counting mode	PCS	PCS	—
Percent mode	%	%	—
Ounce (Avoir)	OZ	OZ	28.349523125 g
Pound	Lb	Lb	453.59237 g
Pound/Ounce	L OZ	LO	1 lb=16 oz 1 oz=28.349523125 g
Troy Ounce	OZt	OZt	31.1034768 g
Metric Carat	ct	ct	0.2 g
Momme	mom	mom	3.75 g
Pennyweight	dwt	dwt	1.55517384 g
Grain (UK)	GN	GN	0.06479891 g
Tael (HK general, Singapore)	tL	tL	37.7994 g
Tael (HK jewelry)			37.429 g
Tael (Taiwan)			37.5 g
Tael (China)			31.25 g
Tola (India)	tOL	tOL	11.6638038 g
Messghal	MES	MES	4.6875 g
Programmable-unit (Multi-unit)	MLT	MLT	—

The tables below indicate the weighing capacity and the minimum display for each unit, depending on the balance model.

Unit	Capacity			Minimum display
	FZ-1200CT FX-1200CT	FZ-700CT FX-700CT	FZ-500CT FX-500CT	
Gram	252	152	102	0.001
Ounce (Avoir)	8.89	5.36	3.59	0.00005
Pound	0.555	0.335	0.224	0.000005
Pound/Ounce	0L 8.88 oz	0L 5.36 oz	0L 3.60 oz	0L 0.01 oz
Troy Ounce	8.10	4.88	3.27	0.00005
Metric Carat	1260	760	510	0.001
Momme	67.2	40.5	27.2	0.001
Pennyweight	162.0	97.7	65.5	0.001
Grain (UK)	3888	2345	1574	0.02
Tael (HK general, Singapore)	6.66	4.02	2.69	0.00005
Tael (HK jewelry)	6.73	4.06	2.72	0.00005
Tael (Taiwan)	6.72	4.05	2.72	0.00005
Tael (China)	8.06	4.86	3.26	0.00005
Tola (India)	21.6	13.0	8.74	0.0001
Messghal	53.7	32.4	21.7	0.0005

## 9-9 Storing Units

The units or modes can be selected and stored in the function table. The sequence of displaying the units or modes can be arranged in the function table so as to fit the frequency of use.

Select a unit or mode and arrange the sequence of display as follows:

- 1 Press and hold the **SAMPLE** key until **bASFnC** of the function table is displayed.
- 2 Press the **SAMPLE** key several times to display **Unit**.
- 3 Press the **PRINT** key to enter the unit selection mode.
- 4 Specify a unit or mode in the order to be displayed using the following keys.

**SAMPLE** key To sequentially display the units.


**RE-ZERO** key To specify a unit or mode. The stabilization indicator appears when the displayed unit or mode is specified.

- 5 Press the **PRINT** key to store the units or modes. The balance displays **End** and then displays the next menu of the function table.
- 6 Press the **CAL** key to exit the function table. Then the balance returns to the weighing mode with the unit specified first in step 4.

### Notes

**When the power is turned on, the scale displays the unit specified first in step 4.**

**In the weighing mode, to select a unit or mode for weighing, press the **MODE** key.**

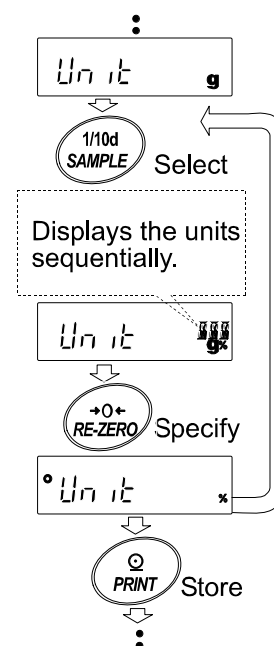

## 9-10 Counting Mode (PCS)

This is the mode to determine the number of objects in a sample based on the standard sample unit mass. The unit mass means the mass of one piece of the sample. The smaller the variables in each sample unit mass are, the more accurate the counting will be. The balance is equipped with the Automatic Counting Accuracy Improvement (ACAI) function to improve the counting accuracy.

### Notes

For counting, use samples with a unit mass of at least ten or more times the minimum weighing value of the balance.

If the sample unit mass variable is too large, it may cause a counting error.

To improve the counting performance, use the ACAI function frequently or divide the samples into several groups and count each group.

### Selecting the counting mode

- 1 Press the **MODE** key to select **PCS** (counting mode).

### Note

If **PCS** is not displayed, store the counting mode (**PCS**) as described in “9-9 Storing Units”.

### Storing a sample unit mass


- 2 Press the **SAMPLE** key to enter the sample unit mass storing mode.  
Even in the storing mode, pressing the **MODE** key will switch to the next mode.
- 3 To select the number of samples, press the **SAMPLE** key several times. It may be set to 5, 10, 25, 50 or 100.

### Note

A greater number of samples will yield more accurate counting result.

- 4 Place a container on the weighing pan, if necessary. Press the **RE-ZERO** key to cancel the weight (tare). The number specified in step 3 appears.  
e.g.: **25 0** is displayed if 25 is selected in step 3.
- 5 Place the number of samples specified on the pan. In this example, 25 pieces.
- 6 Wait for the stabilization indicator to turn on. Press the **PRINT** key to calculate and store the unit mass. The balance displays **25** (counting mode) and is set to count samples with this unit mass.

To improve the accuracy of the unit mass, go to step 8.

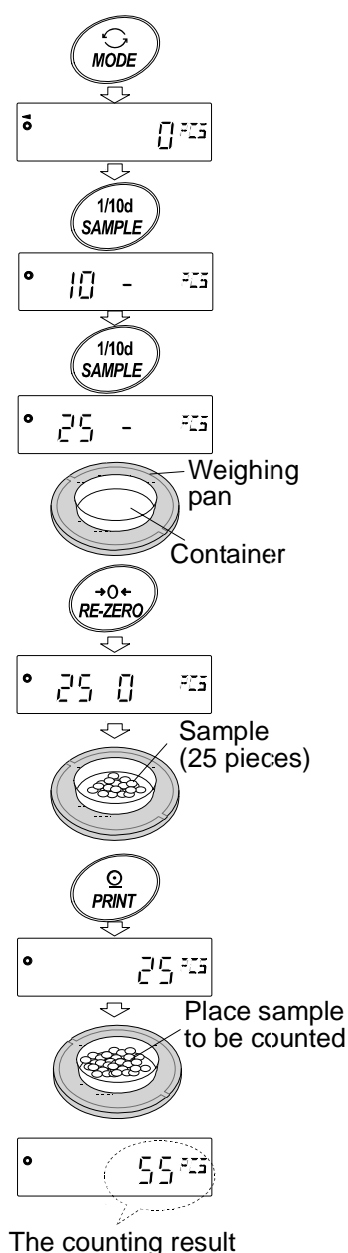



## Notes

If the balance judges that the mass of the samples is too light and is not adequate to be used as the unit mass, it displays **Lo**. In that case, store the mass by some quantity. For example, the minimum weighing value of the balance is 0.001 g and 10 pieces of samples weigh 0.005 g. Store 100 pieces of samples as 10 and multiply the weighing result by 10.

If the balance judges that the mass of the samples is too light to acquire accurate weighing, it displays an error requiring the addition of more samples to the specified number. For example, **50-PCS** appears to require 25 more samples. Add 25 samples and press the **PRINT** key. When the unit mass is stored correctly, the balance proceeds to the counting mode.

For a more accurate counting operation, use samples with a unit mass of at least ten or more times the minimum weighing value of the balance. The minimum weighing value of the FZ-CT and FX-CT series balances is 0.001 g. So, the recommended sample unit mass is 0.01 g or more.

The sample unit mass stored, even if the AC adapter is removed, is maintained in non-volatile memory.

## Counting operation


- Place the samples to be counted on the pan.  
While the stabilization indicator is on, pressing the **PRINT** key will output the weight value (number of objects), using the RS-232C serial interface.

### Note

Peripheral equipment, that is sold separately, such as a printer or a personal computer is required.

## Counting mode using the ACAI function

The ACAI is a function that improves the accuracy of the unit mass automatically by increasing the number of samples and averaging the unit mass variable to minimize the weighing error, as the counting process proceeds.

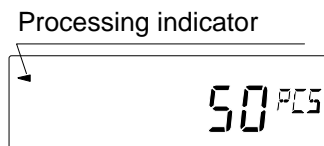

- If a few more samples are added, the processing indicator turns on. To prevent an error, add three or more. The processing indicator does not turn on if overloaded. Try to add the same number of samples as displayed.
- The balance re-calculates the unit mass while the processing indicator is blinking. Do not touch the balance or samples on the pan until the processing indicator turns off.
- Counting accuracy is improved when the processing indicator turns off.  
Each time the above operation is performed, a more accurate unit mass will be obtained. There is no definite upper limit of ACAI range for the number of samples exceeding 100. Try to add the same number of samples as displayed.
- Remove all the samples used in ACAI and proceed with the counting operation using the improved unit mass.

## 9-11 Percent Mode (%)

This is the mode to display the weight value in percentage compared to a 100% reference mass and is used for target weighing or checking the sample variable.

### Selecting the percent mode

- 1 Press the **MODE** key to select **%** (percent mode).

#### Note

If **%** is not displayed, store the percent mode (%) as described in “9-9 Storing Units”.

### Storing the 100% reference mass

- 2 Press the **SAMPLE** key to enter the 100% reference mass storing mode.

Even in the storing mode, pressing the **MODE** key will switch to the next mode.

- 3 Place a container on the weighing pan, if necessary. Press the **RE-ZERO** key to cancel the weight (tare). The balance displays **100.0 %**.

- 4 Place the sample to be set as the 100% reference mass on the pan or in the container.

- 5 Press the **PRINT** key to store the reference mass. The balance displays **100.00 %**. (The decimal point position depends on the reference value. The reference mass stored, even if the AC adapter is removed, is maintained in non-volatile memory.)

#### Note

If the balance judges that the mass of the sample is too light to be used as a reference, it displays **L0**. Do not use the sample.

- 6 Remove the sample.


### Reading the percentage

- 7 Place a sample to be compared to the reference mass on the pan. The displayed percentage is based on the 100% reference mass.

While the stabilization indicator is on, pressing the **PRINT** key will output the weight value, using the RS-232C serial interface.

#### Note

Peripheral equipment, that is sold separately, such as a printer or a personal computer is required.

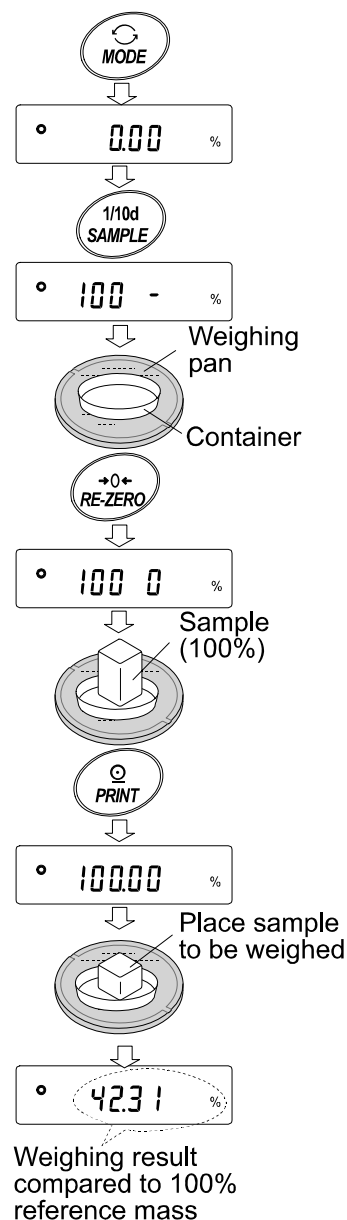

## 9-12 Description of the Item “Application Function”

---

### **Capacity indicator ( *APF 1* )**

In the weighing mode, the indicator displays the weight data relative to the weighing capacity in percentage. (Zero = 0%, maximum capacity = 100%)

### **Statistical calculation mode ( *APF 2* )**

The mode statistically calculates the weight data, and displays or outputs the results. For details, refer to “9-13 Statistical Calculation Mode”.

## 9-13 Statistical Calculation Mode

The statistical calculation mode statistically calculates the weight data, and displays or outputs the results. To use the statistical calculation mode, set the "Application function (APF)" parameter of "Application (AP Fnc)" in the function table to "2", as described below.

Statistical items available are number of data, sum, maximum, minimum, range (maximum-minimum), average, standard deviation, coefficient of variation and relative error. What statistical items to output can be selected from the four modes in the function table.

- The wrong data input can be canceled by the key operation, if immediately after the input.
- Turning the balance off will delete the statistical data. (Turning the display off using the **ON:OFF** key will not delete the data.)
- The standard deviation, coefficient of variation and relative error are obtained by the equation below:

$$\text{Standard deviation} = \sqrt{\frac{N \cdot \sum (X_i)^2 - (\sum X_i)^2}{N \cdot (N-1)}} \quad \text{where } X_i \text{ is the } i\text{-th weight data,}$$

N is number of data.

$$\text{Coefficient of variation (CV)} = \frac{\text{Standard deviation}}{\text{Average}} \times 100 (\%)$$

$$\text{Relative error of maximum value} = \frac{\text{Maximum value} - \text{Average}}{\text{Average}} \times 100 (\%)$$

$$\text{Relative error of minimum value} = \frac{\text{Minimum value} - \text{Average}}{\text{Average}} \times 100 (\%)$$


### 9-13-1 Getting Started

#### Switching to the Statistical Function Mode (Changing The Function Table)



- 1 Press and hold the **SAMPLE** key until **bASFnC** of the function table is displayed, then release the key.
- 2 Press the **SAMPLE** key several times to display **AP Fnc**.
- 3 Press the **PRINT** key to display **APF N<sub>2</sub>-n**.
- 4 Press the **RE-ZERO** key several times to display **APF S<sub>2</sub>-n**.

To select statistical items to output, go to step 5.  
To store the statistical function mode setting, go to step 7.

To disable the statistical calculation mode, press the **RE-ZERO** key to select **APF N<sub>2</sub>-n**.

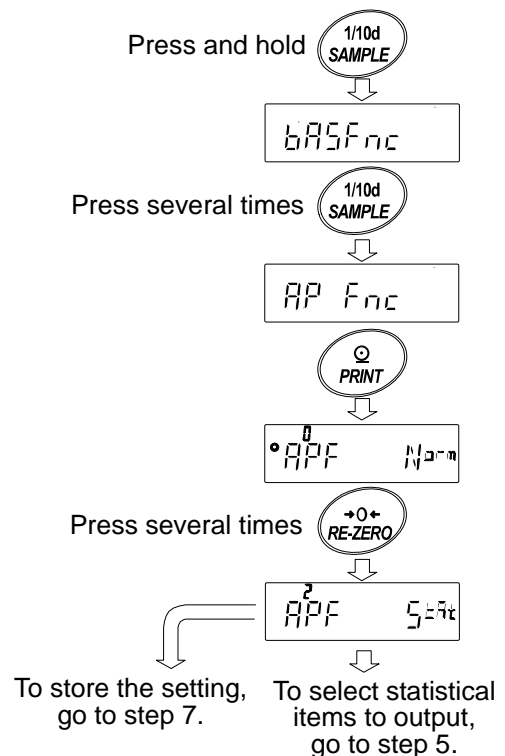


## Selecting the statistical items to output

- Press the **SAMPLE** key to display .
- Press the **RE-ZERO** key to select the output items. In the example,  is selected to output the number of data, sum, maximum, minimum, range (maximum-minimum) and average.


Parameter	Description
0	Number of data, sum
1	Number of data, sum Maximum, minimum, range (maximum – minimum), average
2	Number of data, sum Maximum, minimum, range (maximum – minimum), average, Standard deviation, coefficient of variation
3	Number of data, sum Maximum, minimum, range (maximum – minimum), average, Standard deviation, coefficient of variation Relative error of maximum value, relative error of minimum value

- Press the **PRINT** key to store the setting.
- Press the **CAL** key to return to the weighing mode.

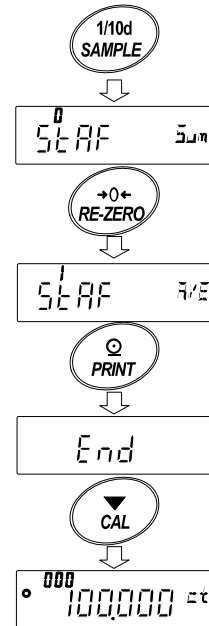

## Selecting the unit

- Press the **MODE** key to select the unit to be used for the statistical calculation mode. In the example shown at the right, carat (ct) is selected.

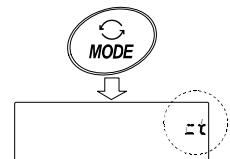

### Notes

Selecting the unit using the **MODE** key is not available after the data is entered. In this case, clear the data as described on page 45 and select the unit using the **MODE** key.

When the unit used for the statistical calculation mode is to be enabled upon power-on, select the unit in “Unit (Unit)” of the function table beforehand.


## 9-13-2 Using The Statistical Calculation Mode

### Entering data for statistical calculation

Use the following keys to operate the statistical calculation mode.

- MODE** key .....
  - When the data is entered, moves between the displaying items (weighing mode, statistical results and data operation) each time the key is pressed.
  - When no data has been entered, selects the unit.
- SAMPLE** key ..... Turns the minimum weighing value on or off, in the weighing mode.
- RE-ZERO** key ..... Sets the display to zero in the weighing mode.
- PRINT** key .....
  - Outputs the data number and the weight data and includes the weight data to statistical calculation in the weighing mode. (Output is not in the data format specified in the function table because of the data number added.)
  - Outputs the statistical results while the statistical results are displayed. (Output is not in the data format specified in the function table.)
- CAL** key ..... Returns to the weighing mode.

- 1 Press the **RE-ZERO** key to set the display to zero.
- 2 Place the sample on the weighing pan and wait for the stabilization indicator to turn on.
- 3 Press the **PRINT** key to add the data displayed to statistical calculation. The number of data on the upper left of the display increases by 1.
- 4 Repeat steps 1 to 3 for each weighing.

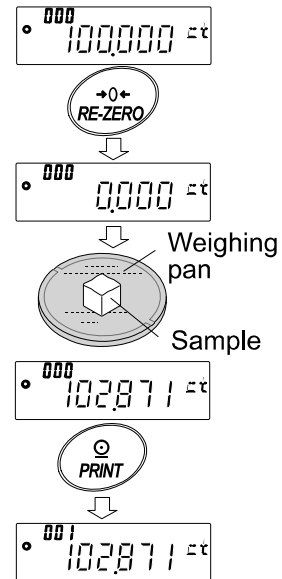

### Outputting the statistical results

- 5 Each time the **MODE** key is pressed, the display changes: the results as selected in “Statistical function mode output items (StAF)”, **CLEAR** and **CANCEL**.

#### Notes


When the number of data is 1, the coefficient of variation and the relative error are displayed as -----.

When the average is 0, the coefficient of variation and the relative error are as -----.

Statistical items are indicated on the upper left of the display using the following symbols.

Symbol	Statistical item
$\Sigma n$	Sum
$\bar{n} \uparrow$	Maximum
$\bar{n} \downarrow$	Minimum
$r$	Range (Maximum – minimum)
$\bar{A} \bar{V} E$	Average
$Sd$	Standard deviation
$Cv$	Coefficient of variation
$\bar{n} \uparrow \%$	Relative error of maximum value
$\bar{n} \downarrow \%$	Relative error of minimum value

- 6 While the results are displayed, press the **PRINT** key to output the results.

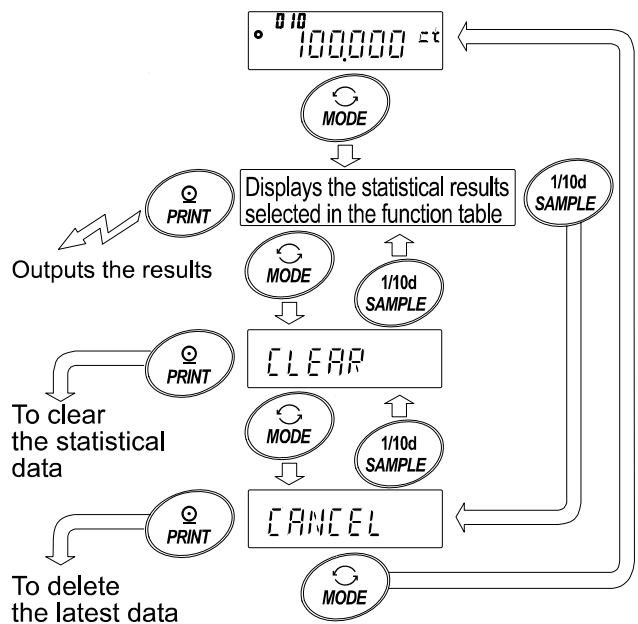


Output example  
Function table parameter (StAF)

N	10	} 0   1   2   3
SUM	+10.000ct	
MAX	+1.050ct	
MIN	+0.950ct	
R	+0.100ct	
AVE	+1.000ct	
SD	+0.2800 ct	
CV	+2.80 %	
MAX%	+5.00 %	
MIN%	+5.00 %	

## Deleting the latest data

When the wrong data is entered, it can be deleted and excluded from statistical calculation. Only the latest data can be deleted.


- 1 In the weighing mode, press the **MODE** key several times to display **CANCEL**.
- 2 Press the **PRINT** key to display **CAN no**.
- 3 Press the **RE-ZERO** key to display **CAN Co**.
- 4 Press the **PRINT** key to delete the latest data and exclude it from statistical calculation.  
The number of data decreases by 1 when the balance returns to the weighing mode.

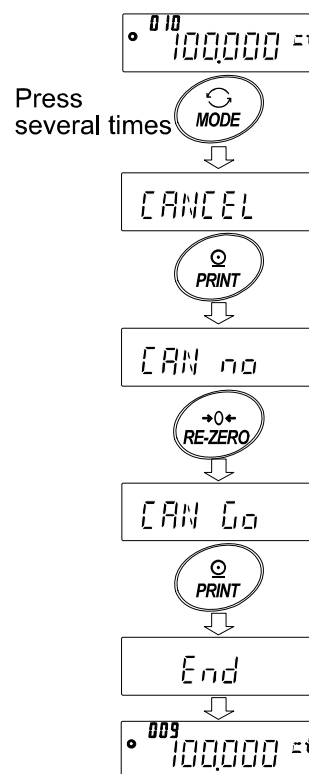

## Clearing the statistical data

All the statistical data will be deleted and the number of data will be 0 (zero).

- 1 In the weighing mode, press the **MODE** key several times to display **CLEAR**.
- 2 Press the **PRINT** key to display **CLr no**.
- 3 Press the **RE-ZERO** key to display **CLr Co**.
- 4 Press the **PRINT** key to delete the statistical data.  
The number of data becomes 0 (zero) when the balance returns to the weighing mode.

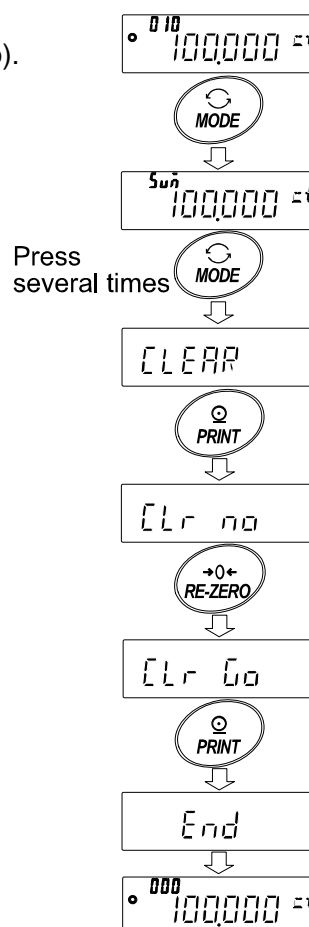

## 9-14 Comparator Function

The results of the comparison are indicated by **HI** **OK** **LO** on the display.

Operating conditions:

- No comparison
- Comparison when the weight data is stable or overloaded, excluding “near zero”
- Comparison when the weight data is stable or overloaded, including “near zero”
- Continuous comparison, excluding “near zero”
- Continuous comparison, including “near zero”

To compare, use:

- Upper limit value and lower limit value

Input method:

- Digital input

### Note

“Near zero” means that the weight value is within  $\pm 10$  digits of the minimum weighing value. For example, using an FZ-1200CT in carat mode, the range of  $\pm 0.010$  ct is “near zero”. For the description of “Comparator (CP Fnc)”, refer to “9-3 Details of the Function Table”.

### Setting example

(Continuous comparison, excluding “near zero”, upper limit and lower limit values, digital input)

#### Selecting a comparator mode

- 1 Press and hold the **SAMPLE** key until **bAS Fnc** of the function table is displayed.
- 2 Press the **SAMPLE** key several times to display **CP Fnc**.
- 3 Press the **PRINT** key.
- 4 Press the **RE-ZERO** key several times to display **CP ALL EN**.
- 5 Press the **PRINT** key to store the selected mode.

#### Entering the upper limit value

- 6 With **CP HI** displayed, press the **PRINT** key. The current setting of the upper limit value is displayed with all the digits blinking.
  - When the current setting is not to be changed, press the **PRINT** or **CAL** key to proceed to step 7.
  - When the current setting is to be changed, press the **RE-ZERO** key. Change the setting using the following keys.

<b>SAMPLE</b> key	To select the digit to change the value.
<b>RE-ZERO</b> key	To change the value of the digit selected.
<b>MODE</b> key	To switch the polarity.
<b>PRINT</b> key	To store the new setting and go to step 7.
<b>CAL</b> key	To cancel the new setting and go to step 7.

#### Entering the lower limit value

- 7 With **CP LO** displayed, press the **PRINT** key. The current setting of the lower limit value is displayed with all the digits blinking.
  - When the current setting is not to be changed, press the **PRINT** or **CAL** key to proceed to step 8.
  - When the current setting is to be changed, press the **RE-ZERO** key. Change the setting using the following keys.

<b>SAMPLE</b> key	To select the digit to change the value.
<b>RE-ZERO</b> key	To change the value of the digit selected.
<b>MODE</b> key	To switch the polarity.
<b>PRINT</b> key	To store the new setting and go to step 8.
<b>CAL</b> key	To cancel the new setting and go to step 8.

- 8 Press the **CAL** key to exit the comparator function and return to the weighing mode.



## 9-15 Clock and Calendar Function (Only for the FZ-CT series)

The FZ-CT series balance is equipped with a clock and calendar function. When the “GLP output (GLP)” parameter is set to “I” or “C” and the “Time/Date output (Time/Date)” parameter is set to “I”, “C” or “J”, the time and date are added to the output data. Set or confirm the time and date as follows:

### Operation

- 1 Press and hold the **SAMPLE** key until **bR5FnC** of the function table is displayed.
- 2 Press the **SAMPLE** key several times to display **CL Adj**.
- 3 Press the **PRINT** key. The balance enters the mode to confirm or set the time and date.

### Confirming the date

- 4 The current date is displayed with all the digits blinking.
  - When the date is correct and the operation is to be finished, press the **CAL** key and go to step 8.
  - When the date is correct and the time is to be confirmed, press the **SAMPLE** key and go to step 6.
  - When the date is not correct and is to be changed, press the **RE-ZERO** key and go to step 5.


### Note

The year is expressed using a two-digit format. For example, the year 2012 is expressed as “12”.

### Setting the date (with part of the digits blinking)

- 5 Set the date using the following keys.

<b>SAMPLE</b> key	To select the digits to change the value. The selected digits blink.
<b>RE-ZERO</b> key	To increase the value by one.
<b>MODE</b> key	To decrease the value by one.
<b>PRINT</b> key	To store the new setting, display <b>End</b> and go to step 6.
<b>CAL</b> key	To cancel the new setting and go to step 6.

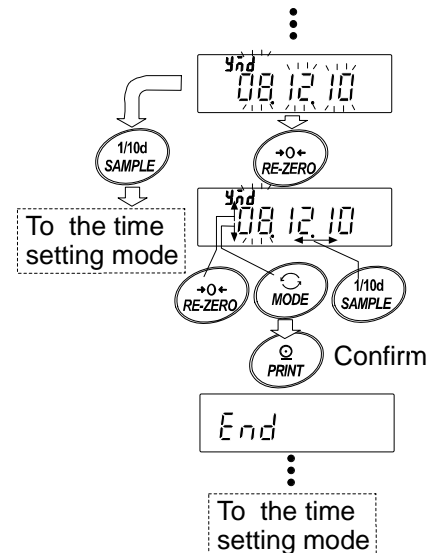


## Confirming the time

- The current time is displayed with all the digits blinking.
  - When the time is correct and the date does not need to be confirmed, press the **CAL** key and go to step 8.
  - When the time is correct and the date is to be confirmed, press the **SAMPLE** key and go back to step 4.
  - When the time is not correct and is to be changed, press the **RE-ZERO** key and go to step 7.

## Setting the time (with part of the digits blinking)

- Set the time in a 24-hour format using the following keys.

<b>SAMPLE</b> key	To select the digits to change the value. The selected digits blink.
<b>RE-ZERO</b> key	To increase the value by one.
<b>MODE</b> key	To decrease the value by one.
<b>PRINT</b> key	To store the new setting, display <b>End</b> and go to step 8.
<b>CAL</b> key	To cancel the new setting and go back to step 4.

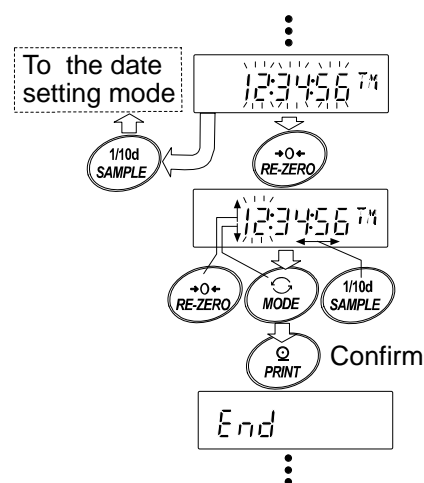

## Quitting the operation

- The balance displays the next menu of the function table. Press the **CAL** key to exit the clock and calendar function and return to the weighing mode.

## Notes

**Do not enter invalid values such as a non-existing date when setting the time and date.**

**When the clock backup battery has been depleted, the balance displays **rtc PF**. The dead battery only affects the clock and calendar function. When this happens, press any key and set the time and date. The clock and calendar function will continue to work normally as long as the AC adapter is connected to the balance.**

## 10. ID NUMBER AND GLP REPORT

- The ID number is used to identify the balance when Good Laboratory Practice (GLP) or Good Manufacturing Practice (GMP) is used.
- The ID number is maintained in non-volatile memory even if the AC adapter is removed.
- The output format for GLP/GMP compliant report is selected at “GLP output ( *INF*o )” of the function table and can be output to a personal computer or printer using the RS-232C serial interface.
- The GLP/GMP compliant report includes the balance manufacturer, model, serial number, ID number and space for signature for weight data, and the weight used and results for calibration or calibration test data.

When the AD-8121B printer is used, the date and time can be printed using the AD-8121B clock and calendar function. In this case, set the “GLP output ( *INF*o )” parameter to “1”.

- The balance can output the following:
  - “Calibration report” of the calibration, using the internal mass (Calibration due to changes in temperature and one-touch calibration.)
  - “Calibration report” of the calibration, using an external weight.
  - “Calibration test report” of the calibration test, using an external weight.
  - “Title block” and “End block” for the weight data.

### 10-1 Setting the ID Number

- 1 Press and hold the **SAMPLE** key until **bRSFnC** of the function table is displayed.
- 2 Press the **SAMPLE** key several times to display **id**.
- 3 Press the **PRINT** key. Set the ID number using the following keys.

- |                                     |   |
|-------------------------------------|---|
| <b>SAMPLE</b> key                   | To select the digit to change the value. The selected digit blinks.                         |
| <b>RE-ZERO</b> key, <b>MODE</b> key | To set the character of the digit selected. Refer to the display character set shown below. |
| <b>PRINT</b> key                    | To store the new ID number and display <b>RP FnC</b>  |
| <b>CAL</b> key                      | To cancel the new ID number and display <b>RP FnC</b>                                       |

- 4 Press the **CAL** key to return to the weighing mode.

#### Display character set

0	1	2	3	4	5	6	7	8	9	-	_	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
0	1	2	3	4	5	6	7	8	9	-	_	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o	p	q	r	s	t	u	v	w	x	y	z
← <b>MODE</b> key											_ Space											<b>RE-ZERO</b> key →															

### 10-2 GLP Report

Set the following parameters to output the GLP/GMP compliant report.

- To print the report, set the “GLP output ( *INF*o )” parameter to “1”, set the “Data output pause ( *PUSE* )” parameter to “1” and use MODE 3 of the AD-8121B printer. For details on using the printer, refer to “14-1 Connection to the AD-8121B Printer”.
- To output the report to a personal computer using the RS-232C serial interface, set the “GLP output ( *INF*o )” parameter to “2”.

#### Note

**If the time and date are not correct, adjust the AD-8121B clock and calendar (FX-CT series) or use “CL Adj” of the function table to adjust the time and date (FZ-CT series).**

### Calibration report using the internal mass (Only for the FZ-CT series)

When the setting is “*inFo 1*”:

AD-8121 format

```

      A & D
MODEL  FZ-1200CT
S/N    012345678
ID     ABCDEFG
DATE   2011/12/31
TIME   12:34:56
CALIBRATED<INT.>
REMARKS

SIGNATURE
-----
    
```

← Manufacturer →  
 ← Model →  
 ← Serial number →  
 ← ID number →  
 ← Date →  
 ← Time →  
 ← Calibration type →  
 ← Remarks →  
 ← Signature →

When the setting is “*inFo 2*”:

General data format

```

      A_&_D<TERM>
MODEL__FZ-1200CT<TERM>
S/N____012345678<TERM>
ID_____ABCDEFGG<TERM>
DATE<TERM>
_____2011/12/31<TERM>
TIME<TERM>
_____12:34:56<TERM>
CALIBRATED<INT.><TERM>
REMARKS<TERM>
<TERM>
<TERM>
SIGNATURE<TERM>
<TERM>
<TERM>
-----<TERM>
<TERM>
<TERM>
    
```

- ␣ Space, ASCII 20h
- <TERM> Terminator, C<sub>R</sub>, L<sub>F</sub> or C<sub>R</sub>
- C<sub>R</sub> Carriage return, ASCII 0Dh
- L<sub>F</sub> Line feed, ASCII 0Ah

### Calibration test report using the internal mass (Only for the FZ-CT series)

(Calibration test does not perform calibration.)

When the setting is “*inFo 1*”:

AD-8121 format

```

      A & D
MODEL  FX-1200CT
S/N    012345678
ID     ABCDEFG
DATE   2011/12/31
TIME   12:23:34
CAL. TEST<EXT.>
ACTUAL
      0.000 g
      +199.999 g
TARGET
      +200.0000 g
REMARKS

SIGNATURE
-----
    
```

← Manufacturer →  
 ← Model →  
 ← Serial number →  
 ← ID number →  
 ← Date →  
 ← Time →  
 ← Calibration test type →  
 ← Zero point value →  
 ← Target weight value →  
 ← Target weight value →  
 ← Remarks →  
 ← Signature →

When the setting is “*inFo 2*”:

General data format

```

      A_&_D<TERM>
MODEL__FX-1200CT<TERM>
S/N____012345678<TERM>
ID_____ABCDEFGG<TERM>
DATE<TERM>
<TERM>
_____12:23:34<TERM>
<TERM>
_____0.000__g<TERM>
_____199.999__g<TERM>
TARGET<TERM>
_____200.0000__g<TERM>
REMARKS<TERM>
<TERM>
<TERM>
SIGNATURE<TERM>
<TERM>
<TERM>
-----<TERM>
<TERM>
<TERM>
    
```

- ␣ Space, ASCII 20h
- <TERM> Terminator, C<sub>R</sub>, L<sub>F</sub> or C<sub>R</sub>
- C<sub>R</sub> Carriage return, ASCII 0Dh
- L<sub>F</sub> Line feed, ASCII 0Ah

## Calibration report using an external weight

When the setting is “*info 1*”:

AD-8121 format

```

      A & D
MODEL  FX-1200CT
S/N    012345678
ID     ABCDEFG
DATE   2011/12/31
TIME   12:23:34
CALIBRATED(EXT.)
CAL.WEIGHT
      +200.0000 g
REMARKS

SIGNATURE
-----
    
```

□ Space, ASCII 20h  
 <TERM> Terminator, C<sub>R</sub>, L<sub>F</sub> or C<sub>R</sub>  
 C<sub>R</sub> Carriage return, ASCII 0Dh  
 L<sub>F</sub> Line feed, ASCII 0Ah

When the setting is “*info 2*”:

General data format

```

      A_&_D<TERM>
MODEL__FX-1200CT<TERM>
S/N____012345678<TERM>
ID_____ABCDEFG<TERM>
DATE<TERM>
<TERM>
      *
TIME<TERM>
<TERM>
      *
CALIBRATED(EXT.)<TERM>
CAL.WEIGHT<TERM>
____+200.0000__g<TERM>
REMARKS<TERM>
<TERM>
<TERM>
SIGNATURE<TERM>
<TERM>
<TERM>
-----<TERM>
<TERM>
<TERM>
    
```

\* With FZ-CT series, the time and date are added to output data.

## Calibration test report using an external weight

(Calibration test does not perform calibration.)

When the setting is “*info 1*”:

AD-8121 format

```

      A & D
MODEL  FZ-1200CT
S/N    012345678
ID     ABCDEFG
DATE   2011/12/31
TIME   12:23:34
CAL.TEST(INT.)
ACTUAL
      0.000 g
      +199.999 g
TARGET
      +200.0000 g
REMARKS

SIGNATURE
-----
    
```

□ Space, ASCII 20h  
 <TERM> Terminator, C<sub>R</sub>, L<sub>F</sub> or C<sub>R</sub>  
 C<sub>R</sub> Carriage return, ASCII 0Dh  
 L<sub>F</sub> Line feed, ASCII 0Ah

When the setting is “*info 2*”:

General data format

```

      A_&_D<TERM>
MODEL__FZ-1200CT<TERM>
S/N____012345678<TERM>
ID_____ABCDEFG<TERM>
DATE<TERM>
      2011/12/31<TERM>
TIME<TERM>
      12:23:34<TERM>
CAL.TEST(INT.)<TERM>
ACTUAL<TERM>
      0.000__g<TERM>
      +199.999__g<TERM>
TARGET<TERM>
      +200.0000__g<TERM>
REMARKS<TERM>
<TERM>
<TERM>
SIGNATURE<TERM>
<TERM>
<TERM>
-----<TERM>
<TERM>
<TERM>
    
```

\* With FZ-CT series, the time and date are added to output data.

## Title block and end block

When a weight value is recorded as the GLP data, "Title block" and "End block" are inserted at the beginning and at the end of a group of weight values, in the GLP report.

### Note

To output the report to an AD-8121B printer , use MODE 3 of the AD-8121B printer.

### Operation

- 1 With the weight data displayed, press and hold the **PRINT** key until **Start** is displayed. The "Title block" is output.
- 2 The weight data is output according to the parameter setting of the data output mode.
- 3 Press and hold the **PRINT** key until **End** is displayed. The "End block" is output.

When the setting is "Info 1":

When the setting is "Info 2":

#### AD-8121 format

```

                A & D
MODEL      FX-1200CT
S/N       012345678
ID        ABCDEFG
DATE      2011/12/31
START
TIME      12:23:34

WT        +102.456 g
WT        +102.461 g
WT        +102.462 g
WT
    
```

```

WT        +102.453 g
WT        +102.471 g
WT        +102.464 g
    
```

```

END
TIME      12:34:56
REMARKS

SIGNATURE
-----
    
```

#### General data format

```

                A & D<TERM>
MODEL__FX-1200CT<TERM>
S/N____012345678<TERM>
ID_____ABCDEFG<TERM>
DATE<TERM>
<TERM>
START<TERM>
TIME<TERM>
<TERM>
    
```

```

WT___+102.456__g<TERM>
WT___+102.461__g<TERM>
    
```

```

WT___+102.453__g<TERM>
WT___+102.451__g<TERM>
WT___+102.471__g<TERM>
WT___+102.464__g<TERM>
    
```

```

<TERM>
END<TERM>
TIME<TERM>
<TERM>
REMARKS<TERM>
<TERM>
<TERM>
SIGNATURE<TERM>
<TERM>
<TERM>
-----<TERM>
<TERM>
<TERM>
    
```


- Space, ASCII 20h
- <TERM> Terminator, CR, LF or CR
- CR Carriage return, ASCII 0Dh
- LF Line feed, ASCII 0Ah

\* With FZ-CT series, the time and date are added to output data.

# 11. UNDERHOOK

The underhook can be used for magnetic materials or density measurement. The built-in underhook is revealed by removing the plastic cap on the bottom of the balance.

Use the underhook as shown below.

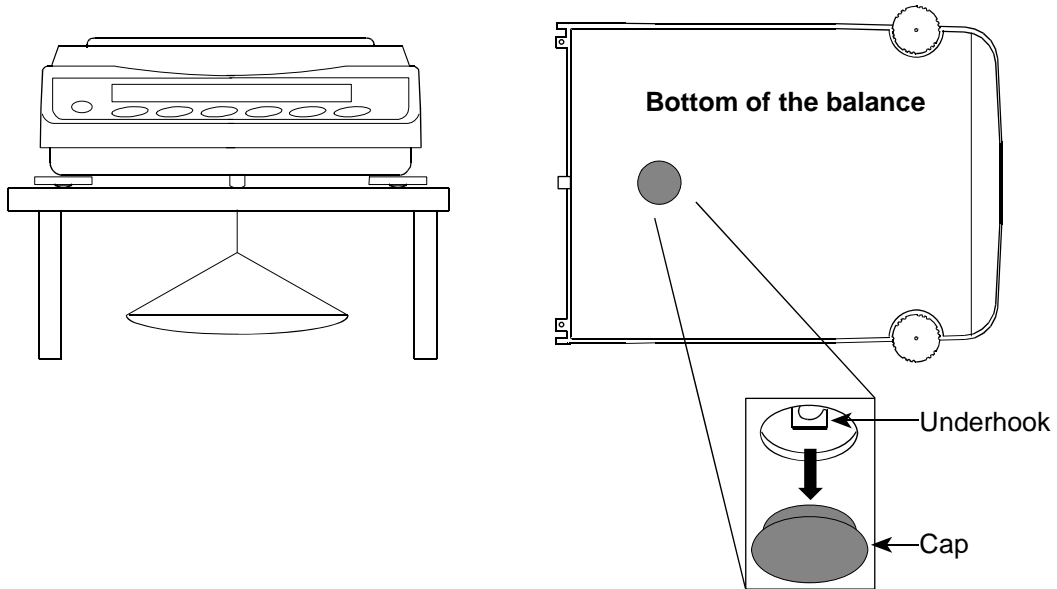

## Caution

**Do not apply excessive force to the underhook.**

**When not in use, attach the plastic cap to prevent dust from getting into the balance.**

## 12. PROGRAMMABLE-UNIT

This is a programmable unit conversion function. It multiplies the weight data in grams by an arbitrary coefficient set in the function table and displays the result.

The coefficient must be within the range between the minimum and maximum shown below. If the coefficient set is beyond the range, an error is displayed and the balance returns to the coefficient setting mode, prompting to enter an appropriate value. A coefficient of 1 was set at the factory.

Model	Minimum coefficient	Maximum coefficient
FZ-1200CT / 700CT / 500CT FX-1200CT / 700CT / 500CT	0.000001	1000

### Operation

- 1 Press and hold the **SAMPLE** key until **bASFnC** of the function table is displayed.
- 2 Press the **SAMPLE** key several times to display **MULT**.
- 3 Press the **PRINT** key. The balance enters the mode to confirm or set the coefficient.

### Confirming the coefficient

- 4 The current coefficient is displayed with the first digit blinking.
  - When it is not to be changed, press the **CAL** key and proceed to step 6.
  - When it is to be changed, press the **RE-ZERO** key and proceed to step 5.

### Setting the coefficient

- 5 Set the coefficient using the following keys.

**SAMPLE** key To select a digit to change the value. The selected digit blinks.

**RE-ZERO** key To change the value.


**MODE** key To change the decimal point position.

Each time the switch is pressed, the decimal point position changes as follows:

→ 0.000001 → 00.00001 → ... → 000000.1 → 0000001

**PRINT** key To store the new setting, display **End** and go to step 6.

**CAL** key To cancel the new setting and go to step 6.

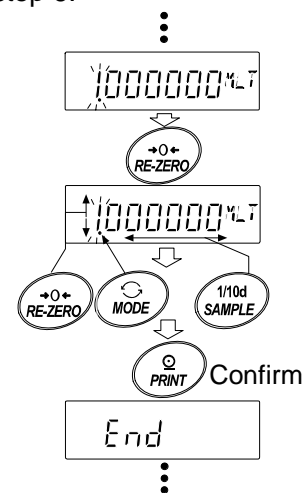

### Quitting the operation

- 6 The balance displays **Unit**. Press the **CAL** key to exit the programmable-unit function and return to the weighing mode.

### Using the function


Press the **MODE** key to select the programmable-unit (no display on the unit section). Perform weighing as described in "5-1 Basic Operation". After weighing, the balance displays the result (weight data in grams x coefficient).



# 13. RS-232C SERIAL INTERFACE


The balance is a Data Communication Equipment (DCE) device. Connect the balance to a personal computer (DTE) using a straight through cable.

- Transmission system : EIA RS-232C (D-Sub 9-pin, female connector)
- Transmission form : Asynchronous, bi-directional, half duplex
- Transmission rate : 10 times/second or 5 times/second (same as the display refresh rate)
- Data format : Baud rate : 600, 1200, 2400, 4800, 9600, 19200 bps
  - Data bits : 7 or 8 bits
  - Parity : Even, Odd (Data bits 7 bits)
  - None (Data bits 8 bits)
- Stop bit : 1 bit
- Code : ASCII

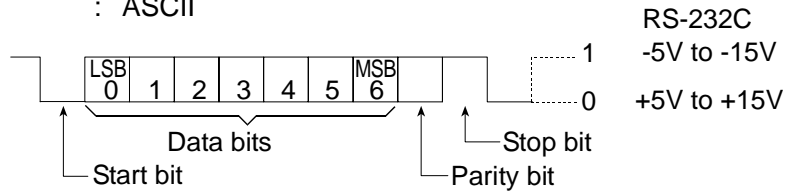


## D-Sub 9-pin assignments

Pin No.	Signal name	Direction	Description
1	-	-	No connection
2	TXD	Output	Transmit data
3	RXD	Input	Receive data
4	-	-	No connection
5	SG	-	Signal ground
6	DSR	Output	Data set ready
7	RTS	Input	Request to send
8	CTS	Output	Clear to send
9	-	-	No connection

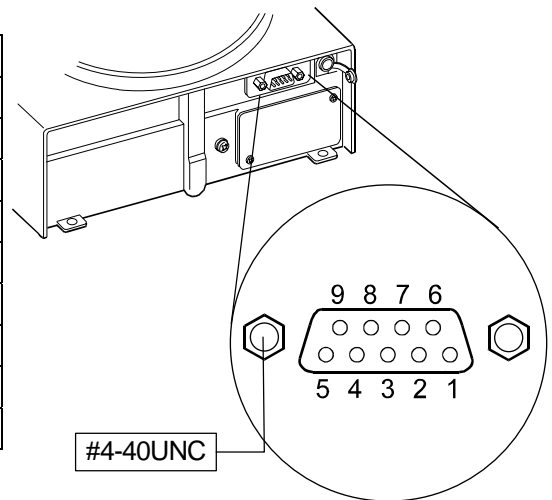

Signal names of the balance side are the same as the DTE side with TXD and RXD reversed.

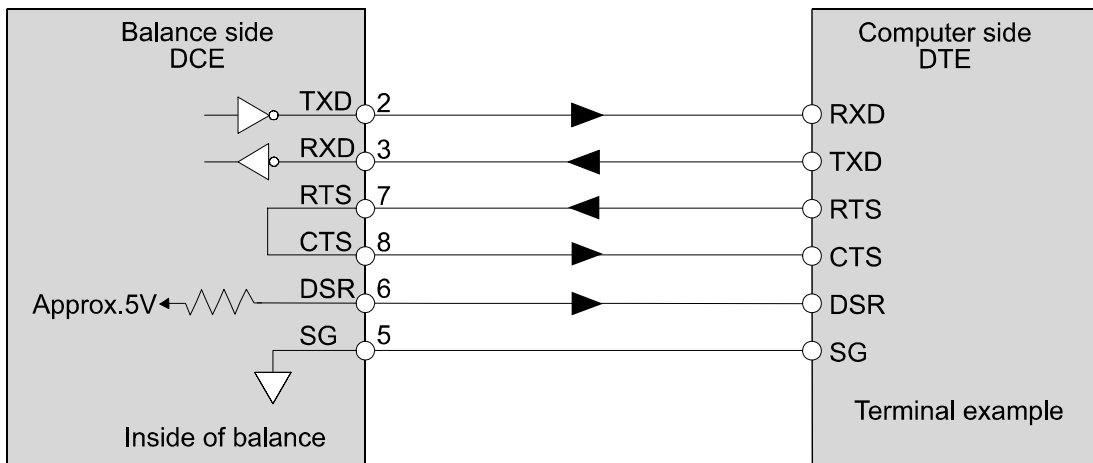

# 14. CONNECTION TO PERIPHERAL EQUIPMENT

## 14-1 Connection to the AD-8121B Printer

Set the following parameters to use the AD-8121B printer.

Example of use	AD-8121B mode setting
To print A&D standard format weight data, using the FZ-CT, FX-CT <b>PRINT</b> key or FZ-CT, FX-CT auto print mode. (The time and date can be added.)	MODE 1
To print A&D standard format weight data, using the AD-8121B <b>DATA</b> key or AD-8121B built-in timer. (The time and date can be added.) To print, using the AD-8121B chart printing function.	MODE 2
To print the FZ-CT, FX-CT statistical data.	MODE 3
To print GLP output.	MODE 3

Class	Item and Parameter	Factory settings	AD-8121B MODE 1	AD-8121B MODE 2	AD-8121B MODE 3
<i>dout</i> Data output	<i>Prt</i> Data output mode	0	0,1,2,4,5 *1	3	0,1,2,4,5 *1
	<i>PUSE</i> Data output pause	0	0	0	0,1 *2
<i>SIF</i> Serial interface	<i>bPS</i> Baud rate	2	2	2	2
	<i>bitPr</i> Data bit, parity bit	0	0	0	0
	<i>CrLF</i> Terminator	0	0	0	0
	<i>tYPE</i> Data format	0	0	0	1

\*1 Set appropriate parameters for "PP-P (Auto print polarity)" and "PP-b (Auto print difference)" when auto print mode A or B (*Prt* 1 or 2) is selected.




Set the AD-8121B DIP switch No.3 to ON when unstable data is printed with "*Prt* 4".

\*2 Set 1 when multiple lines are printed in the FZ-CT, FX-CT statistical calculation mode.

### Notes


Refer to "10-2 GLP Report" for print samples.

### Settings of AD-8121B DIP switches



MODE	AD-8121B DIP switch	Description
MODE 1		Print at receiving data. Standard mode, statistical calculation mode
MODE 2		Print by the AD-8121B <b>DATA</b> key operation or AD-8121B built-in timer. Standard mode, interval mode, chart mode
MODE 3		Print at receiving data. Dump print mode

DIP switch No.3 : Handling unstable data

ON Print  
OFF Not printed



Set the DIP switch No.4 to OFF.

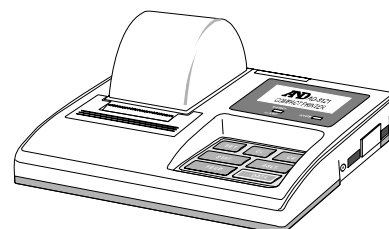


## 14-2 Connection to a Computer

---

The FZ-CT and FX-CT series balances can be connected to a personal computer using the RS-232C serial interface. As an option, the FXi –02 USB interface is available to transmit the balance data to a personal computer.

The FZ-CT and FX-CT series balances are a DCE.

Use a straight through cable. If purchasing the RS-232C cable on the market, check the interface connections and type.

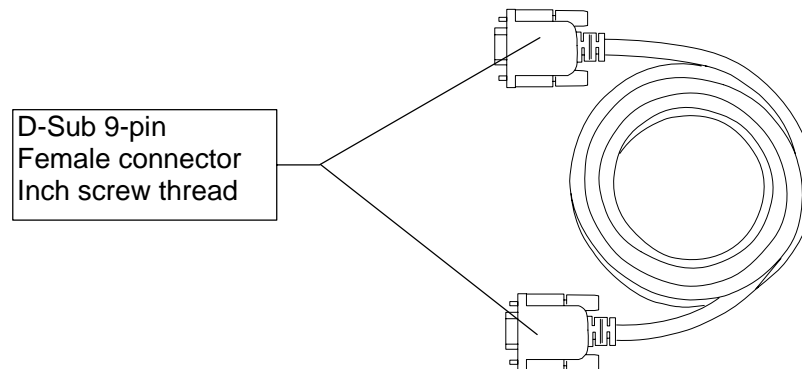

## 14-3 Using Windows Communication Tools (WinCT)

---

When Windows is used as an operating system in a personal computer, the WinCT software, that is downloaded from the A&D website, can be used to transmit the weight data to the personal computer.

The WinCT has three communication methods: "RsCom", "RsKey" and "RsWeight".

### RsCom

- Can transmit commands to control the balance.
- Can make bi-directional communication between the balance and a personal computer using the RS-232C serial interface.
- Can display or store the data using a text file format. Can also print the data using a printer connected to the personal computer.
- When several ports of a personal computer have balances connected, can communicate with each balance simultaneously.
- Can share a personal computer with other application software.

### RsKey

- Can transmit the weight data output from the balance directly to other application software such as Microsoft Excel.
- Can be used with most application software.

## **RsWeight**

- Can retrieve the weight data from the balance and display it in graph form in real-time.
- Can calculate and display the maximum, minimum, average, standard deviation and coefficient of variation values of data.

### **Using the WinCT software, the balance can do the following:**

- 1 Analyzing the weight data and the statistics with "RsKey"  
The weight data can be input directly into an Excel worksheet. Then, Excel can analyze the data to obtain sum, average, standard deviation, maximum and minimum value, and display them in a graph.
- 2 Controlling the balance using commands from a personal computer  
By using "RsCom", the personal computer sends commands such as "re-zero" or "send weight data" to the balance and controls the balance.
- 3 Printing the balance GLP report using your printer  
The balance GLP report can be printed using a printer connected to the personal computer.
- 4 Receiving weight data at a certain interval  
The weight data can be received at a certain interval and data characteristic with elapsed time can be obtained.
- 5 Using a personal computer as an external indicator  
With the "RsKey" test mode function, a personal computer can be used as an external weight indicator for the balance. (To do this, set the balance data output mode to stream mode.)

# 15. COMMANDS

## 15-1 Command List

### Note

A command has a terminator added, that is specified using the "Terminator (E<sub>rLF</sub>)" parameter of "Serial interface (S<sub>rF</sub>)" in the function table, and is sent to the balance.

### Commands to query weight data

<b>C</b>	Cancels the <b>S</b> or <b>SIR</b> command.
<b>Q</b>	Requests the weight data immediately.
<b>S</b>	Requests the weight data when stabilized.
<b>SI</b>	Requests the weight data immediately.
<b>SIR</b>	Requests the weight data continuously.
<b>E<sub>sc</sub>P</b>	Requests the weight data when stabilized.

Note: The "Q" and "SI" commands, the "S" and "E<sub>sc</sub>P" commands behave the same.

### Commands to control the balance

<b>CAL</b>	Same as the <b>CAL</b> key.
<b>EXC *</b>	Calibration using an external weight.
<b>OFF</b>	Turns the display off.
<b>ON</b>	Turns the display on.
<b>P</b>	Same as the <b>ON:OFF</b> key.
<b>PRT</b>	Same as the <b>PRINT</b> key.
<b>R</b>	Same as the <b>RE-ZERO</b> key.
<b>SMP</b>	Same as the <b>SAMPLE</b> key.
<b>T</b>	Tare key.
<b>Z</b>	Same as the <b>RE-ZERO</b> key.
<b>E<sub>sc</sub>T</b>	Same as the <b>RE-ZERO</b> key.
<b>U</b>	Same as the <b>MODE</b> key.
<b>?ID</b>	Requests the ID number.
<b>?SN</b>	Requests the serial number.
<b>?TN</b>	Requests the model name.
<b>?PT</b>	Requests the tare weight.
<b>PT: ***** * <u>    </u>g</b>	Changes the tare weight. The unit added is the current weighing unit in A&D standard format.

Note: The "R", "Z" and "E<sub>sc</sub>T" commands behave the same.

E<sub>sc</sub> : ASCII code 1Bh

\* : Only for the FZ-CT series

## 15-2 Acknowledge Code and Error Codes

When the "AK, Error code (ErrCd)" parameter of "Serial interface (SIF)" is set to "1", the balance outputs <AK> code or an error code for each command as follows:

<AK> (06h) Acknowledge in ASCII code.

- When the balance receives a command to request data and can not process it, the balance transmits an error code (EC, Exx).  
When the balance receives a command to request data and can process it, the balance outputs the data.
- When the balance receives a command to control the balance and can not process it, the balance transmits an error code (EC, Exx).  
When the balance receives a command to control the balance and can process it, the balance transmits the acknowledge code.

Among commands to control the balance, the following transmit the acknowledge code both when the balance receives the command and when the balance has accomplished the command. If the command can not be processed properly, the balance transmits an error code (EC, Exx). This error can be released using the CAL command.


CAL command (Calibration command)

ON command (Display ON command)


P command (Display ON/OFF command)

R command (RE-ZERO command)


R command example

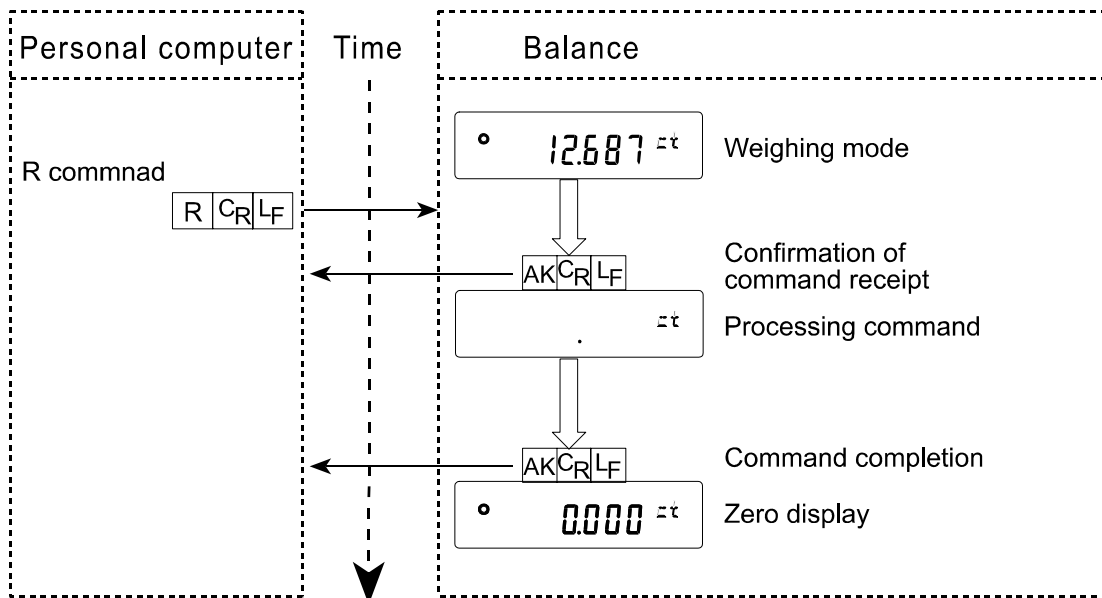

### T command example

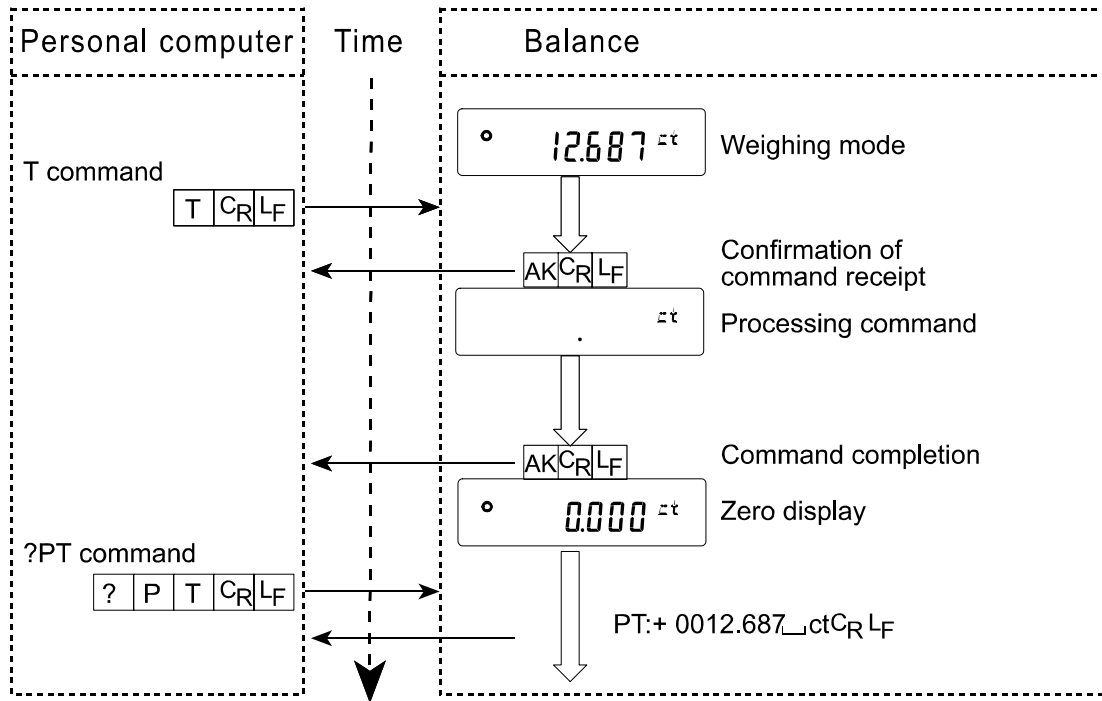

### PT command example

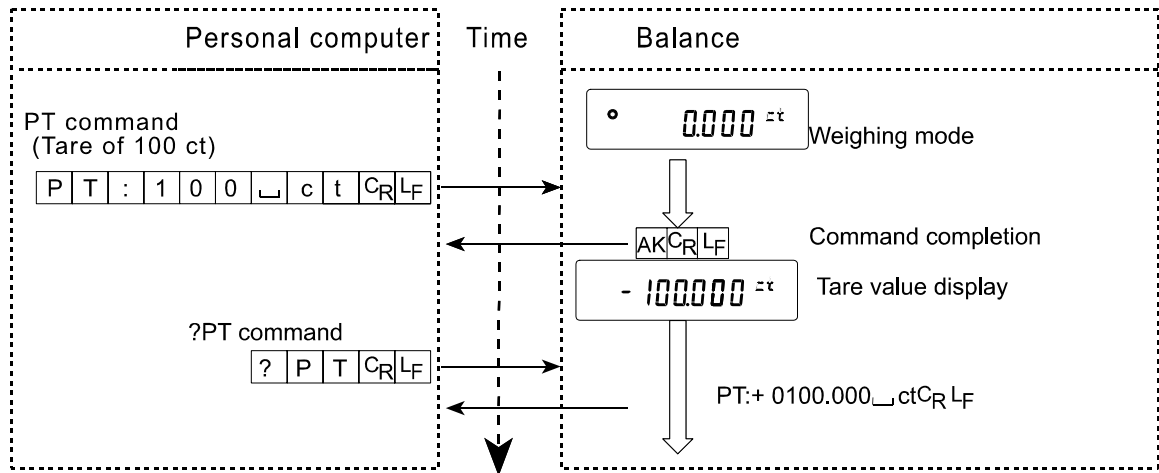

- When a communication error has occurred due to external noise, or a parity error has occurred due to transmission error, the balance transmits an error code. In this case, send the command again.

## 15-3 Settings Related to RS-232C

Concerning the RS-232C, the balance has two functions: "Data output ( *dout* )" and "Serial interface ( *SIF* )". Set each function as necessary.

## 16. MAINTENANCE

- Do not use organic solvents or chemical cloth to clean the balance.

Clean the balance as described below:

Balance main unit Weighing pan	Use a soft, lint free cloth that is moistened with a mild detergent to clean. The edge of the weighing pan is sharp. Use caution when cleaning the pan.
Breeze break (standard accessory)	An antistatic treatment has been applied to the breeze break components. Use a soft, dry, lint free cloth to clean. Cleaning with a cloth that is moistened with water or a mild detergent repetitively, or washing with water, may degrade the antistatic effect.

- Do not disassemble the balance. Contact the local A&D dealer if the balance needs service or repair.
- Use the original packing material for transportation.



# 17. TROUBLESHOOTING

## 17-1 Checking the Balance Performance and Environment

The balance is a precision instrument. When the operating environment or the operating method is inadequate, correct weighing can not be performed. Place a sample on the pan and remove it, and repeat this several times. If the balance seems to have a problem with repeatability or to perform improperly, check as described below. Also, you can visit the A&D website at <http://www.aandd.co.jp> for more information.

If improper performance persists after checking, contact the local A&D dealer for repair.

### Checking that the balance performs properly

- Check the balance repeatability using an external weight. Be sure to place the weight in the center of the weighing pan.
- Check the balance repeatability, linearity and calibrated value using external weights with a known value.

### Checking that the operating environment or weighing method is proper

#### Operating environment

- Is the weighing table solid enough?
- Is the balance level? Refer to “3-1 Before Use”.
- Is the operating environment free from vibration and drafts?
- Is there a strong electrical or magnetic noise source such as a motor near the balance?









#### Weighing method




- Is the weighing pan installed correctly?
- Is the **RE-ZERO** key pressed before placing a sample on the weighing pan?
- Is the sample placed in the center of the weighing pan?
- Has the balance been calibrated?
- Has the balance been warmed up for one hour before weighing?

#### Sample and container

- Has the sample absorbed or lost moisture due to the ambient conditions such as temperature and humidity?
- Has the temperature of the container been allowed to equalize to the ambient temperature? Refer to “3-2 During Use”.
- Is the sample charged with static electricity? Refer to “3-2 During Use”.
- Is the sample of magnetic material such as iron? Caution is required for weighing magnetic materials. Refer to “3-2 During Use”

## 17-2 Error Codes

Display	Error code	Description
	<b>EC, E11</b>	<p><b>Stability error</b></p> <p>The balance can not stabilize due to an environmental problem. Prevent vibration, drafts, temperature changes, static electricity and magnetic fields.</p> <p>Refer to “3. PRECAUTIONS” for details on the operating environment and “6. RESPONSE ADJUSTMENT” about adapting the balance to the environment.</p> <p>To return to the weighing mode, press the <b>CAL</b> key.</p>
		<p><b>Out of range error</b></p> <p>The value entered is beyond the settable range.</p> <p>Re-enter the value.</p>
	<b>EC, E17</b>	<p><b>Internal mass error (Only for the FZ-CT series)</b></p> <p>The internal mass application mechanism does not function properly. Perform the weighing operation from the beginning again.</p>
	<b>EC, E20</b>	<p><b>Calibration weight error</b></p> <p>The calibration weight is too heavy.</p> <p>Confirm that the weighing pan is properly installed.</p> <p>Confirm the calibration weight value.</p> <p>Press the <b>CAL</b> key to return to the weighing mode.</p>
	<b>EC, E21</b>	<p><b>Calibration weight error</b></p> <p>The calibration weight is too light.</p> <p>Confirm that the weighing pan is properly installed.</p> <p>Confirm the calibration weight value.</p> <p>Press the <b>CAL</b> key to return to the weighing mode.</p>
		<p><b>Overload error</b></p> <p>A sample beyond the balance weighing capacity has been placed on the pan.</p> <p>Remove the sample from the pan.</p>
		<p><b>Weighing pan Error</b></p> <p>The weight value is too light.</p> <p>Confirm that the weighing pan and pan support are properly installed.</p> <p>Press the <b>ON:OFF</b> key two times to return to the weighing mode.</p> <p>If the error still persists, calibrate the balance.</p>
		<p><b>Sample mass error</b></p> <p>The balance can not store the sample for the counting mode or for the percent mode because it is too light.</p> <p>Use a sample that is heavier.</p>

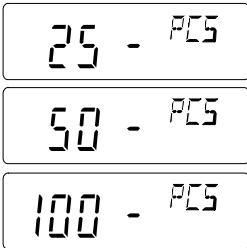Display	Error code	Description
		<p><b>Unit mass error</b></p> <p>The sample unit mass for the counting mode is too light. Storing and using it for counting will cause a counting error.</p> <p>Add samples to reach the specified number and press the <b>PRINT</b> key.</p> <p>Pressing the <b>PRINT</b> key without adding samples will shift the balance to the counting mode. But, to acquire accurate weighing, be sure to add samples.</p>
		<p><b>Balance internal error</b></p> <p>If this error appears persistently, contact the local A&amp;D dealer.</p>
		<p><b>Clock battery error</b></p> <p>The clock backup battery has been depleted. Press any key and set the time and date. The clock and calendar function will continue to work normally as long as the AC adapter is connected to the balance.</p> <p>To replace the backup battery, contact the local A&amp;D dealer.</p>
	<b>EC, E00</b>	<p><b>Communications error</b></p> <p>A protocol error occurred in communications. Confirm the format, baud rate and parity.</p>
	<b>EC, E01</b>	<p><b>Undefined command error</b></p> <p>An undefined command was received. Confirm the command.</p>
	<b>EC, E02</b>	<p><b>Not ready</b></p> <p>A received command can not be processed.</p> <p>e.g. The balance received a Q command, but not in the weighing mode.</p> <p>e.g. The balance received a Q command while processing a RE-ZERO command.</p> <p>Adjust the delay time to transmit a command.</p>
	<b>EC, E03</b>	<p><b>Timeout error</b></p> <p>If the timeout parameter is set to "L-UP 1", the balance did not receive the next character of a command within the time limit of one second.</p> <p>Confirm the communication.</p>
	<b>EC, E04</b>	<p><b>Excess characters error</b></p> <p>The balance received excessive characters in a command. Confirm the command.</p>
	<b>EC, E06</b>	<p><b>Format error</b></p> <p>A command includes incorrect data.</p> <p>e.g. The data is numerically incorrect.</p> <p>Confirm the command.</p>
	<b>EC, E07</b>	<p><b>Parameter setting error</b></p> <p>The received data exceeds the range that the balance can accept.</p> <p>Confirm the parameter range of the command.</p>
<b>Other errors</b>		<p>If the errors described above can not be released or other errors are displayed, contact the local A&amp;D dealer.</p>

## 17-3 Asking For Repair

---

If the balance needs service or repair, contact the local A&D dealer.

The balance is a precision instrument. Use caution when handling the balance and observe the following when transporting the balance.

- Use the original packing material.
- Remove the weighing pan from the main unit


# 18. OPTIONS

## Note

The FXi-02, FXi-08 and FXi-09 can not be used at the same time.

### FXi-02 USB interface (Installed in the balance, Applicable OS: Windows 98 OSR2 or later)

- Used to transmit the balance weight data (numerical value only) uni-directionally to a personal computer via USB.
- Can transmit the balance weight data (numerical value only) directly to other application software such as Microsoft Excel, Word and memo pad.
- Driver installation is not necessary.
- Use the USB converter (AX-USB-9P) to perform bi-directional communication using the WinCT or to output the statistical results or GLP report to a personal computer.

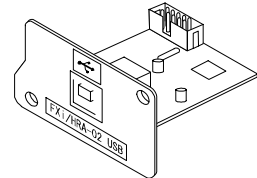


FX i-02 Example of use

	A	B	C	D	E	F	G
1	2019.24						
2	2019.26						
3	2019.28						
4	2232.58						
5	2019.27						
6	2019.27						
7	2019.26						
8	1863.45						
9							
10							
11							
12							
13							
14							
15							

### FXi-08 Ethernet interface

- Used to connect the balance to a LAN.
- The "WinCT-Plus" data communication software is provided as an accessory and can perform the following.
  - Acquire data from multiple balances connected to a LAN.
  - Control these balances with commands.
  - Acquire data transmitted from balances.
- Example: When pressing the **PRINT** key of the balance, data is output and is acquired by the computer.
- The stored data can be used with Microsoft Excel (if installed).

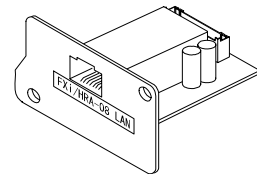

FX i-08 Example of use

	FX-3001	FX-3001	FX-3001	
1	11:19:43 ST +0018.225	g	11:20:02 ST +02019.24	g
2	11:19:49 ST +0018.225	g	11:20:05 ST +02019.26	g
3	11:21:07 ST +0018.295	g	11:20:12 ST +02019.28	g
4	11:21:12 ST +0018.225	g	11:20:39 ST +02232.58	g
5	11:21:17 ST +0018.225	g	11:20:47 ST +02019.27	g
6	11:21:33 ST +0019.667	g	11:20:52 ST +02019.27	g
7	11:21:41 ST +0018.225	g	11:20:59 ST +02019.26	g
8	11:21:51 ST +0018.225	g	11:23:16 ST +01863.45	g
9	11:22:00 ST +0018.224	g		
10	11:22:00 ST +0018.226	g		
11	11:22:38 ST +0018.225	g		
12	11:22:40 ST +0018.293	g		
13	11:22:58 ST +0018.225	g		

### FXi-09 Built-in battery unit (Ni-MH rechargeable battery pack)


- Charging time: Approx. 10 hours
- Continuous operation hours: Approx. 8 hours

## Note

The charging time varies depending on the operating conditions. The balance can not be used while the battery is being charged.

### **FXi-10 Small breeze break**

- Breeze break shorter than the standard large breeze break. (Total height of the small breeze break: 105 mm)

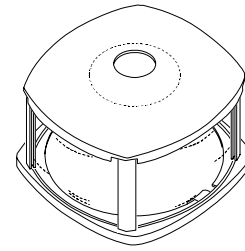

### **FXi-11 Large breeze break**

- Breeze break provided as standard.

### **AX-FXi-31 Main unit cover**

- Main unit protective cover provided as standard.

### **AX-CARAT PAN-WEX**


- Two silver colored carat pans (the same as the carat pan provided as a standard accessory)

### **AX-CARAT PAN-BEX**

- Two black carat pans (the same as the carat pan provided as a standard accessory)

### **AX-USB-9P-EX External USB converter**

- Adds COM ports to a personal computer.
- Once a driver is installed, bi-directional communication is available.
- Even if the personal computer has no COM ports, serial communication software such as WinCT can be used via USB connection.

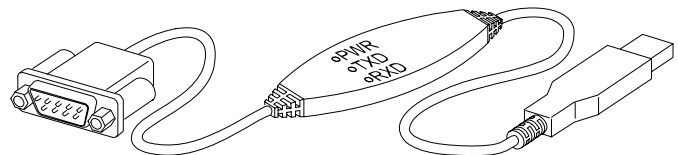

### **AD-8920A Remote display**


- Connected to the FZ-CT and FX-CT series balances using the RS-232C serial interface to display the weight data away from the balance or at a desirable viewing angle.

### **AD-8922A Remote controller**

- Connected to the FZ-CT and FX-CT series balances using the RS-232C serial interface to display the weight data and to remotely control the balance.
- Analog output and comparator output available as an option to be installed.

### **AD-8121B Printer**

- Compact dot-matrix printer
- Statistical function, clock and calendar function, interval print function, graphic print function, dump print mode
- 5 x 7 dots, 16 characters per line
- Print paper (AX-PP143, 45 (W) x 50 (L) mm , ø65 mm)
- AC adapter or alkaline battery.

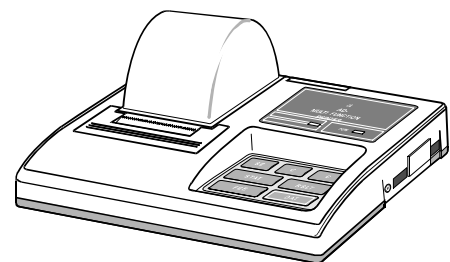

#### **AD-1671 Anti-vibration table**


- A 27-kg table with vibration-absorbing rubber feet, to reduce vibration coming from the floor to enable stable weighing.
- Use the AD-8922A remote controller to avoid weighing errors that can be caused by slight table tilting when operating the scale manually.

#### **AD-1672 Tabletop breeze break**

- Protects the balance from wind from sources such as air conditioning or people passing by, thereby reducing balance weighing error.
- The transparent panel assembly consists of antistatic plastic material that protects the balance from static electricity.


#### **AD-1683 DC static eliminator**

- Used to minimize weighing errors due to static electricity on the material. The AD-1683 is direct-current static eliminator. The ions generated produce no breeze and are effective over a long distance. Therefore, the balance can accurately weight powders, etc. by using the AD-1683.

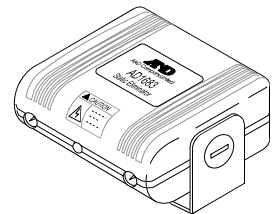

#### **AD-1684 Electrostatic field meter**

- Measures the amount of the static charge on the sample, tare or peripheral equipment and displays the result. If those are found to be charged, discharge them using the AD-1683 DC static eliminator.

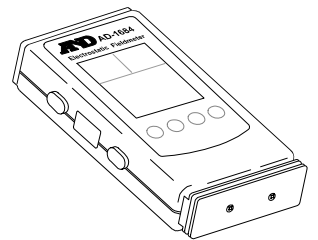

#### **AD-1687 Weighing environment logger**

- A data logger equipped with 4 sensors for temperature, humidity, barometric pressure and vibration that can measure and store environmental data.
- When connected to the RS-232C interface of the balance, the AD-1687 can store environmental data along with weighing data. Therefore, it is possible to store data in an environment where a computer can not be used.
- The stored data can be read to a personal computer using USB. As the AD-1687 is recognized as USB memory, special software is not required to read the data.

#### **AD-1688 Data logger**

- When connected to the RS-232C interface of the balance, the AD-1688 can store the data in an environment where a personal computer can not be used.
- The stored data can be read to a personal computer using USB. As the AD-1688 is recognized as USB memory, special software is not required to read the data.

#### **AD-1689 Tweezers for calibration weight**

- Used when calibrating the balance using an external weight.

## 19. SPECIFICATIONS

	FZ-1200CT	FZ-700CT	FZ-500CT
Weighing capacity	1260 ct	760 ct	510 ct
	252 g	152 g	102 g
Maximum display	1260.042 ct	760.042 ct	510.042 ct
	252.008 g	152.008 g	102.008 g
Minimum weighing value (1 digit)	0.001 ct		
	0.001 g		
Repeatability (Standard deviation)	0.001 ct / 0.0005 g		
Linearity	±0.002 ct / ±0.001 g		
Stabilization time (typical at <b>FAST</b> ) *1	Approx. 2 seconds		
Sensitivity drift (10°C-30°C/50°F-86°F)	±2 ppm/°C		
Internal mass	Available		
Clock function	Available		
Operating environment	5°C to 40°C (41°F to 104°F) 85%RH or less (No condensation)		
Display refresh rate *2	5 times/second or 10 times/second		
Counting mode *3	Minimum unit mass	0.001 g	
	Number of samples	5, 10, 25, 50 or 100 pieces	
Percent mode *3	Minimum 100% reference mass	0.100 g	
	Minimum 100% display	0.01%, 0.1%, 1% (Depends on the reference mass stored.)	
External calibration weight	250 g 50 g 200 g 20 g 100 g	150 g 50 g 100 g 20 g	100 g 20 g 50 g
Weighing pan diameter	90 mm		
Net weight	Approx. 3.8 kg		
External dimensions	198 (W) x 294 (D) x 315 (H) mm		
AC adapter	Confirm that the adapter type is correct for the local voltage and power receptacle type		
Power consumption	Approx. 11VA (supplied to the AC adapter)		
Interface	RS-232C		

\*1 When **MID**, factory setting value of response rate, is used, the stabilization time is approx. 3.5 seconds.

\*2 Factory setting: 5 times/second

\*3 To use the counting mode or the percent mode, storing each mode as described in "9-9 Storing Units" is required.



	FX-1200CT	FX-700CT	FX-500CT
Weighing capacity	1260 ct	760 ct	510 ct
	252 g	152 g	102 g
Maximum display	1260.042 ct	760.042 ct	510.042 ct
	252.008 g	152.008 g	102.008 g
Minimum weighing value (1 digit)	0.001 ct		
	0.001 g		
Repeatability (Standard deviation)	0.001 ct / 0.0005 g		
Linearity	±0.002 ct / ±0.001 g		
Stabilization time (typical at <b>FAST</b> ) *1	Approx. 2 seconds		
Sensitivity drift (10°C-30°C/50°F-86°F)	±2 ppm/°C		
Internal mass	Unavailable		
Clock function	Unavailable		
Operating environment	5°C to 40°C (41°F to 104°F) 85%RH or less (No condensation)		
Display refresh rate *2	5 times/second or 10 times/second		
Counting mode *3	Minimum unit mass		
	0.001 g		
Percent mode *3	Number of samples		
	5, 10, 25, 50 or 100 pieces		
Percent mode *3	Minimum 100% reference mass		
	0.100 g		
Percent mode *3	Minimum 100% display		
	0.01%, 0.1%, 1% (Depends on the reference mass stored.)		
External calibration weight	250 g 50 g 200 g 20 g 100 g	150 g 50 g 100 g 20 g	100 g 20 g 50 g
Weighing pan diameter	90 mm		
Net weight	Approx. 3.4 kg		
External dimensions	198 (W) x 294 (D) x 315 (H) mm		
AC adapter	Confirm that the adapter type is correct for the local voltage and power receptacle type		
Power consumption	Approx. 11VA (supplied to the AC adapter)		
Interface	RS-232C		

\*1 When **MID**, factory setting value of response rate, is used, the stabilization time is approx. 3.5 seconds.




\*2 Factory setting: 5 times/second

\*3 To use the counting mode or the percent mode, storing each mode as described in "9-9 Storing Units" is required.

# 20. EXTERNAL DIMENSIONS

FZ-1200CT / 700CT / 500CT

FX-1200CT / 700CT / 500CT

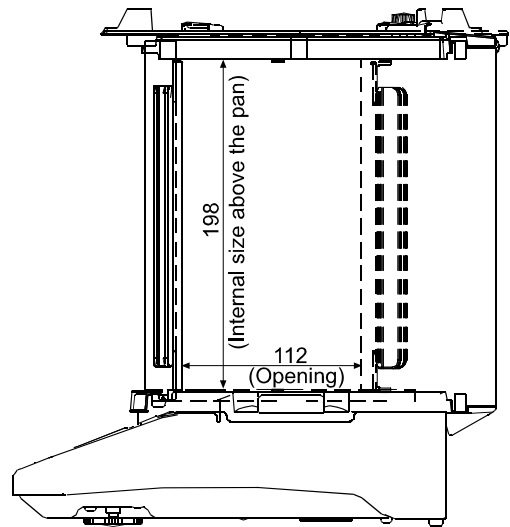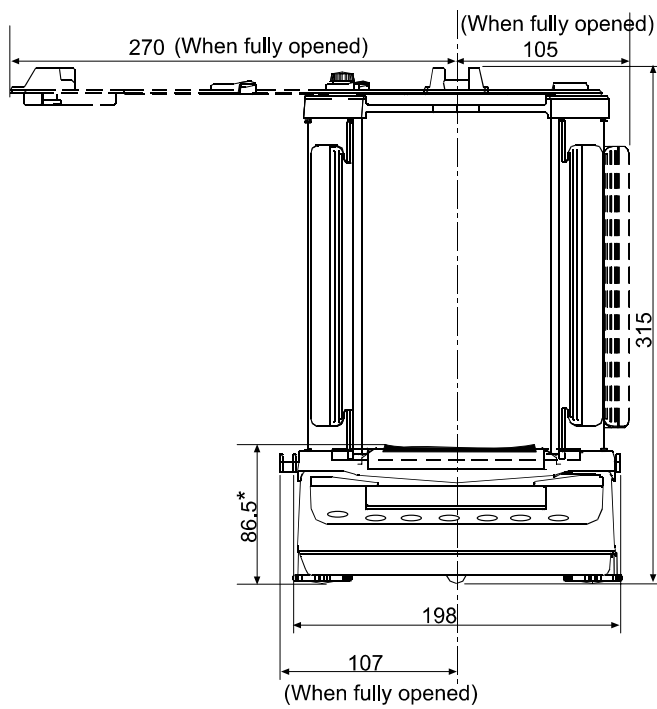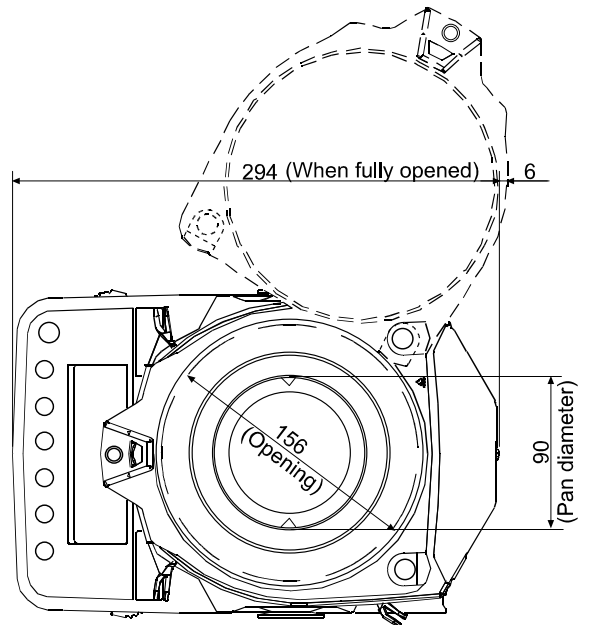

\*: Height up to the weighing pan

Unit: mm











## 21. TERMS/INDEX

### Terms

<b>Stable value</b>	The weight data when the stabilization indicator appears.
<b>Environment</b>	Ambient conditions such as vibration, drafts, temperature, static electricity and magnetic fields which affect the weighing operation.
<b>Calibration</b>	Adjustment of the balance so that it can weigh accurately.
<b>Output</b>	To output the weight data using the RS-232C serial interface.
<b>Zero point</b>	A weighing reference point or the zero display. Usually refers to the value displayed when nothing is on the weighing pan.
<b>Digit</b>	Unit of digital resolution. Used for the balance, a unit of minimum weighing value.
<b>Tare</b>	To cancel the weight of a container which is not included in the weight data.
<b>Mode</b>	Balance operational function.
<b>Re-zero</b>	To set the display to zero.
<b>GLP</b>	Good Laboratory Practice.
<b>GMP</b>	Good Manufacturing Practice
<b>Repeatability</b>	Variation in measured values obtained when the same weight is placed and removed repetitively. Usually expressed as a standard deviation. e.g. Standard deviation=1 digit: This means that measured values fall within $\pm 1$ digit in the frequency of about 68%.
<b>Stabilization time</b>	Time required after a sample being placed, until the stabilization indicator illuminates and the weight data is displayed.
<b>Sensitivity drift</b>	An affect that a change in temperature causes to the weight data. Expressed as temperature coefficient. e.g. Temperature coefficient = 2 ppm/ $^{\circ}$ C : If a load is 300 g and the temperature changes by 10 $^{\circ}$ C, the value displayed changes by the following value. $0.0002\%/^{\circ}$ C x 10 $^{\circ}$ C x 300 g = 6 mg

# Index

## Keys and symbols

 <b>ON/OFF</b> key .....	10
 <b>SAMPLE</b> key .....	10
 <b>MODE</b> key .....	3, 10, 37
 <b>CAL</b> key .....	10
 <b>PRINT</b> key .....	10
 <b>RE-ZERO</b> key .....	10
 Stabilization indicator .....	10
 Interval output mode active indicator .....	10
 Interval output mode standby indicator .....	10
 Processing indicator .....	10
$C_R$ <b>CR</b> .....	33
$L_F$ <b>LF</b> .....	33
$\text{—}$ Space .....	33
100% reference mass .....	40

## A

A&D standard format .....	27, 31
AC adapter .....	5
AC adapter ID label .....	5
ACAI .....	39
AD-1671 .....	69
AD-1672 .....	69
AD-1683 .....	8, 69
AD-1684 .....	69
AD-1687 .....	69
AD-1688 .....	69
AD-1689 .....	69
AD-8121B .....	52, 56, 68
AD-8920A .....	3, 30, 68
AD-8922A .....	68
AK .....	60
Anti-vibration table .....	69
$AP_{FC}$ Application .....	27, 42
$AP-b$ Auto print difference .....	26
$APF$ Application function .....	27, 42
$AP-P$ Auto print polarity .....	26, 56

Application .....	27, 42
Application function .....	27, 42
$Ar-d$ Zero after output .....	26
$At-F$ Auto feed .....	26
Auto display-OFF .....	25, 29
Auto display-ON .....	25, 29
Auto print difference .....	26
Auto print mode A .....	26, 30
Auto print mode B .....	26, 30
Auto print polarity .....	26
$AUE$ Average .....	44
Average .....	27, 42, 44
AX-CARAT PAN-B .....	68
AX-CARAT PAN-S .....	68
AX-FXi-31 .....	68
AX-USB-9P-EX .....	68

## B

$bRSFC$ Environment display .....	25, 37
Baud rate .....	27, 55, 56
$bEEP$ Beep .....	25
$bEP^-$ HI buzzer .....	25
$bEP-$ LO buzzer .....	25
$bEP-$ OK buzzer .....	25
$bPS$ Baud rate .....	27, 56
Breeze break .....	3, 5, 6, 8, 68
Breeze break lower plate .....	5
Breeze ring .....	5
$bEP_r$ Data bit, parity bit .....	27, 56
Built-in battery unit .....	67

## C

$[AL E$ Calibration weight error .....	64
$-[AL E$ Calibration weight error .....	64
<b>CAL</b> key .....	10
Calendar .....	47

Calibration ...	10, 13, 16, 17, 21, 23, 49, 64, 73
Calibration report .....	17, 49
Calibration test.....	18, 49
Calibration test using the internal mass.....	15
Calibration test report .....	15, 19, 49
<i>ERnEEL</i> .....	44
Capacity indicator .....	10, 27, 41
Carat pan.....	5, 68
<i>Ein</i> Calibration test using the internal mass.....	15
<i>ELAdd</i> .....	25, 47, 49
<i>LEER</i> .....	44
Clock .....	47
Coefficient of variation .....	27, 42, 44
Command list.....	59
Comparator function .....	46
Comparator indicators .....	10
<i>Cond</i> Condition.....	25, 28
Counting mode .....	38
<i>CP</i> Comparator mode.....	25
<i>CP Fnc</i> Comparator.....	25, 27
<i>CP Hi</i> Upper limit.....	26
<i>CP Lo</i> Lower limit.....	26
<i>rLF</i> Terminator .....	27, 56
CSV format.....	27, 32
<i>ū</i> Coefficient of variation .....	44

## D

Data bits .....	55
Data format.....	27
Data logger .....	69
Data output mode .....	26
Data output pause .....	26
DC static eliminator .....	69
DCE .....	55, 57
Decimal point.....	25, 29
Digit .....	25, 29, 73
Display at start.....	25
Display refresh rate .....	25, 29
<i>dout</i> Data output .....	26
DP format .....	27, 31

DTE.....	55
----------	----

## E

<i>E</i> .....	64
<i>-E</i> .....	64
EC, E00 .....	65
EC, E01 .....	65
EC, E02 .....	65
EC, E03 .....	65
EC, E04 .....	65
EC, E06 .....	65
EC, E07 .....	65
EC, E11.....	64
EC, E20 .....	64
EC, E21 .....	64
End block.....	52
<i>ErEd</i> Error code .....	27
<i>Error 1</i> .....	64
<i>Error 2</i> .....	64
<i>Error 7</i> .....	64
Ethernet interface.....	67
External dimensions.....	70, 71
External USB converter .....	68

## F

<b>FAST</b> .....	12
Function table .....	24
FXi-02 .....	3, 67
FXi-08 .....	3, 67
FXi-09 .....	3, 67
FXi-10 .....	68
FXi-11 .....	68

## G

GLP.....	15, 49
GLP output.....	13, 17, 18, 26, 49
Grounding terminal .....	5

## H

<i>Hold</i> Hold function .....	25, 28
---------------------------------	--------

Hold mode indicator ..... 10

## I

ID number..... 49

*inF0* GLP output ..... 26

Inhibit..... 22

Initializing the Balance..... 23

*int* Interval time ..... 26

Interval output mode..... 26, 30

Interval output mode active indicator ..... 10

Interval output mode standby indicator..... 10

Interval time..... 26

## K

Key mode ..... 26, 30

Key mode B..... 26, 30

Key mode C..... 26, 30

KF format..... 27, 32

## L

Large breeze break ..... 3, 5, 68

Leveling foot ..... 5

Linearity..... 63, 70, 71

*L0* ..... 64

Lower limit value..... 46

## M

Main unit cover ..... 5, 68

*max* Maximum ..... 44

Maximum..... 27, 42, 44

Maximum display..... 70, 71

**MID** ..... 12

*min* Minimum ..... 44

Minimum..... 27, 42, 44

Minimum 100% reference mass ..... 70, 71

Minimum unit mass ..... 70, 71

Minimum weighing value ..... 70, 71

**MODE** key..... 3, 10, 37

MT format ..... 27, 32

## N

NU format ..... 27, 32

Number of data ..... 27, 42

## O

One-touch calibration..... 14

**ON:OFF** key ..... 10, 23

Operating environment ..... 70, 71

## P

Pan support ..... 5

Parity ..... 55

**PCS** ..... 38, 40

Percent Mode ..... 40

Permit ..... 22

*Pnt* Decimal point ..... 25, 29

*Poff* Auto display-OFF ..... 25, 29

*P-on* Auto display-ON..... 25, 29

**PRINT** key ..... 10, 37

Printer ..... 56, 68

Processing indicator ..... 10

Programmable unit ..... 54

*Prt* Data output mode..... 26, 56

*PUSE* Data output pause..... 26, 56

## R

*r* Range ..... 44

Range ..... 27, 42, 44

Remote controller ..... 68

Remote display ..... 68

Repeatability ..... 70, 71

Response indicators ..... 10, 12

**RE-ZERO** key..... 8, 10

*rst* Display at start ..... 25

RS-232C ..... 55, 57

RsCom..... 57

RsKey ..... 57

RsWeight ..... 58

*rtc PF* ..... 48, 65

S	
<b>SAMPLE</b> key .....	10, 37
<i>Sd</i> Standard deviation.....	44
Sensitivity drift .....	70, 71
<i>SIF</i> Serial interface.....	27
<b>SLOW</b> .....	12
Small breeze break.....	68
<i>SPd</i> Display refresh rate.....	25, 29
Stability band width.....	28
Stabilization indicator.....	10, 37
Stabilization time.....	70, 71
Standard deviation.....	27, 42, 44
Standby indicator .....	10
<i>StRF</i> Statistical function mode output items .....	27, 43
Statistical calculation mode.....	3, 27, 41, 43
Statistical function mode output items .....	27
<i>St-b</i> Stability band width .....	25, 28
Stop bit .....	55
Stream mode .....	26, 30
<i>Suñ</i> Sum.....	44
Sum .....	27, 42, 44

T	
Tabletop breeze break .....	69
Tare .....	11, 38, 40
Terminator.....	27

Timeout.....	27
Title block.....	52
Transmission form .....	55
Transmission rate .....	55
Transmission system .....	55
<i>trc</i> Zero tracking .....	25
<i>t-UP</i> Timeout.....	27
<i>tYPE</i> Data format .....	27, 56

## U

Underhook .....	53
Units.....	10, 35, 37
Upper limit value .....	46
USB interface.....	67

## W

Weighing .....	11
Weighing capacity.....	8, 41, 64, 70, 71
Weighing environment logger .....	69
Weighing pan .....	5
Weighing pan diameter .....	70, 71
Weighing units .....	35
WinCT .....	57

## Z

Zero tracking.....	29
--------------------	----













**A&D Company, Limited**

3-23-14 Higashi-Ikebukuro, Toshima-ku, Tokyo 170-0013 JAPAN  
Telephone: [81] (3) 5391-6132 Fax: [81] (3) 5391-6148

**A&D ENGINEERING, INC.**

1756 Automation Parkway, San Jose, California 95131 U.S.A.  
Telephone: [1] (408) 263-5333 Fax: [1] (408)263-0119

**A&D INSTRUMENTS LIMITED <UK Office>**

Unit 24/26 Blacklands Way, Abingdon Business Park, Abingdon, Oxfordshire  
OX14 1DY United Kingdom  
Telephone: [44] (1235) 550420 Fax: [44] (1235) 550485

**A&D INSTRUMENTS LIMITED <German Sales Office>**

Große Straße 13 b 22926 Ahrensburg Deutschland  
Telefon: [49] (0) 4102 459230 Telefax: [49] (0) 4102 459231

**A&D Australasia Pty Ltd.**

32 Dew Street, Thebarton, South Australia 5031 AUSTRALIA  
Telephone: [61] (8) 8301-8100 Fax: [61] (8) 8352-7409

**A&D KOREA Limited**

한국에이.엔.디(주)  
대한민국 서울시 영등포구 여의도동 36-2 맨하탄 빌딩 8층  
( 8th Floor, Manhattan Bldg. 36-2 Yoido-dong, Youngdeungpo-ku, Seoul, KOREA )  
전화: [82] (2) 780-4101 팩스: [82] (2) 782-4280

**A&D RUS CO., LTD.**

Компания Эй энд Ди Рус  
121357, Российская Федерация, г.Москва, ул. Верейская, дом 17  
( Bldg. 17, Vereyskaya st., Moscow, 121357 RUSSIAN FEDERATION )  
тел.: [7] (495) 937-33-44 факс: [7] (495) 937-55-66

**A&D Instruments India Private Limited**

ऐ&डी इन्स्ट्रूमेन्ट्स इण्डिया प्रा० लिमिटेड  
509, उद्योग विहार , फेस -5, गुडगांव - 122016, हरियाणा , भारत  
( 509, Udyog Vihar, Phase-V, Gurgaon - 122 016, Haryana, India )  
फोन : 91-124-4715555 फैक्स : 91-124-4715599